

Description: Honda/Acura Data Transponder Interface (NO KEY REQUIRED)


Functions: Override OEM Transponder Immobilizer Via Data

Downloadable Firmware for Platform #05: PKG3, PKG8, PKH1, PKH2, PKH3, PKH4, PKHY1, PKM2, PKN2, PKT2



WARNING: Before beginning your install go to www.INTELLIKITS.com and be sure to print the LATEST corresponding installation manual for the firmware that is flashed to the platform you are using.

See Wire Connection Guide for detailed information regarding wire functionality

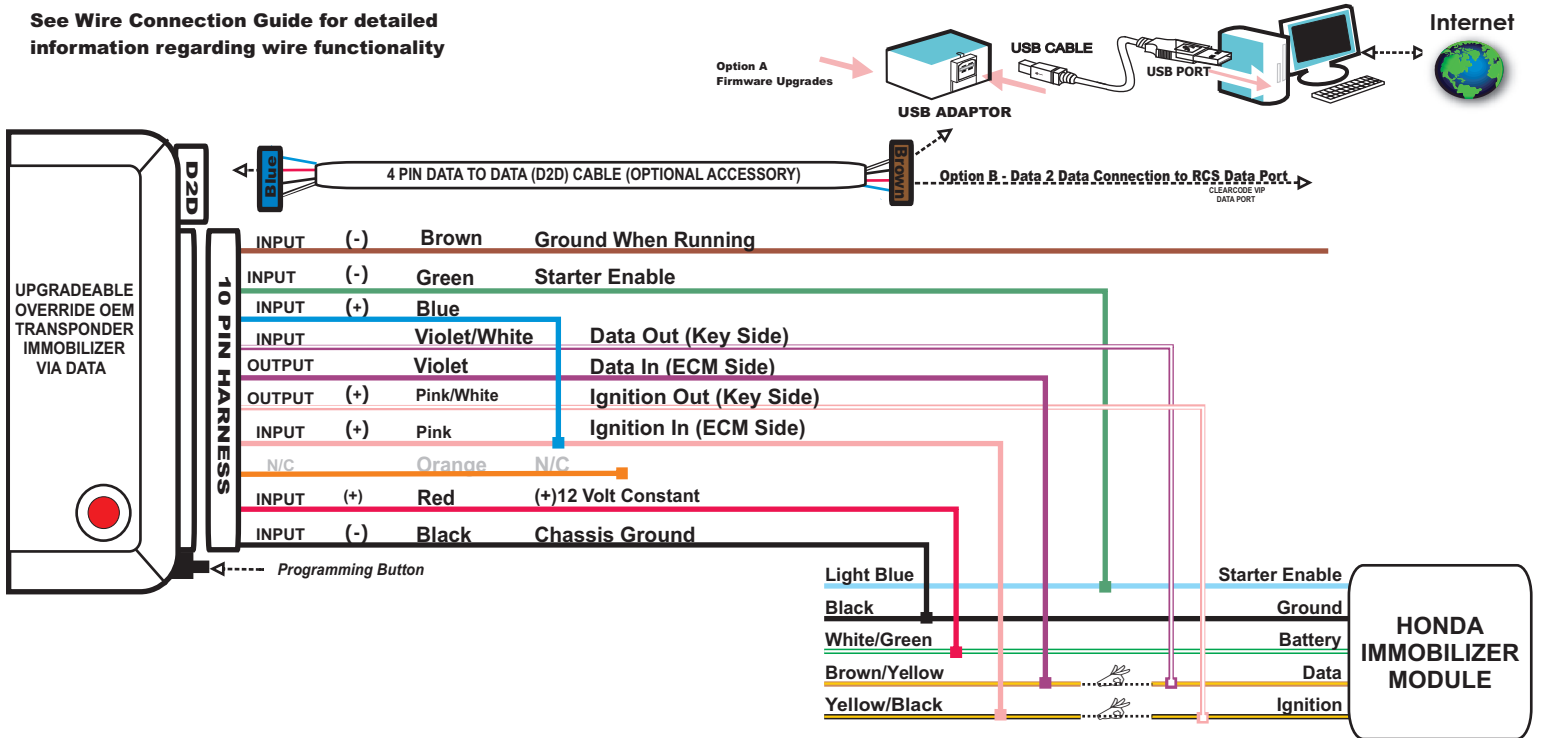

WIRE GUIDE : CONNECTIONS

10 PIN HARNESS → D2D = Optional use of 4 Pin Data to Data (D2D) cable will replace the analogue wire (w2w) connection

PIN#	WIRE COLOR	D2D W2W	I/O STATUS	(-) / (+)	Connect Location	SPECIFIC WIRE CONNECTION LOCATION	ACTIVATION and/or FUNCTIONALITY
1	Brown	D2D W2W	Input	(-)	RCS	Ground When Running output of remote starter.	Immobilizer bypass via Data
2	Green	W2W	Input	(-)	Vehicle	Connect to Light Blue vehicle Starter Enable wire	Enables start
3	Blue	W2W	Input	(+)	Module	Connect to Pink wire from module	Ignition Power Source Supply
4	Violet/White	W2W	Data Input		Vehicle	Connect to Brown/Yellow Data wire (Key Side)	Data Commands from Module to Vehicle
5	Violet	W2W	Data Output		Vehicle	Connect to Brown/Yellow Data wire (ECM Side)	Data Commands from Module to Vehicle
6	Pink/White	W2W	Output	(+)	Vehicle	Connect to Yellow/Black Ignition wire (Key Side)	Ignition Power Source Return
7	Pink	W2W	Input	(+)	Vehicle	Connect to Yellow/Black Ignition wire (ECM Side)	Ignition Power Source Supply
8	Orange	N/C	N/C	N/C	N/C	N/C	N/C
9	Red	D2D W2W	Input	(+)	Vehicle	Connect to White/Green Battery wire Constant (+) 12 Volt Source	Power Source
10	Black	D2D W2W	Input	(-)	Vehicle	Connect to Black Chassis Ground wire	Ground Source

Legend RCS = Remote Control System N/C = No Connection N/A = Not Applicable W2W= analogue wire to wire D2D= data 2 data

DATA to DATA PORT (D2D): Blue connector of D2D Cable plugs into the upgradeable vehicle interface module.

OPTION A: - D2D Port used to connect to USB Bootloader adaptor & computer to download & flash vehicle interface firmware.

OPTION B: - D2D Port used to connect to the data port of a remote control system equipped with ClearCode Vehicle Interface Protocol.

Remote control systems designed with ClearCode VIP can securely communicate via the D2D cable to transmit & receive data commands which initiate specific vehicle function such as doorlocks & immobilizer override and /or request information from the vehicle such as status of entry points (doors) or ambient temperature, diesel glow plug etc... ClearCode VIP represents the doorway to vehicle integration...As an enhanced security feature, this upgradeable vehicle interface module automatically detects when the Vehicle Interface Protocol is present and deactivates the analogue override input wire (brown wire) ensuring that this module can only be activated by an authorized user.

Section C

VEHICLE PROGRAMMING

- Once the module has been properly connected, press and hold push button, LED should turn ON.
- Turn key to IGNITION position, LED will flash
- Turn key OFF, release button, LED turns OFF. Module is now programmed.

*To RESET, unplug kit. While plugging kit back into the 10 PIN harness, press and hold programming button. LED comes on. When LED goes off, release button

This Interface kit / Data Bus Interface part has been tested on the listed vehicles. Other vehicles will be added to the select vehicle list upon completion of compatibility testing. Visit website for latest vehicle application guide. **DISCLAIMER:** Under no circumstances shall the manufacturer or the distributors of the bypass kit / data bus interface part(s) be held liable for any consequential damages sustained in connection with the part(s) installation. The manufacturer and its distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the interface kit / data bus interface part(s) other than its replacement. N.B.: Under no circumstances shall the manufacturer and distributors of this product be liable for consequential damages sustained in connection with this product and neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than the replacement of this product only.