

# Platform # 510

# Firmware: FODL

Installation  
Manual (1/2 Pages)


## Description: Ford Doorlock and Alarm Interface & RF Transponder Bypass (KEY REQUIRED)

**Functions:** Lock/Unlock, Power Sliding Doors (Lft & Rt), OEM Security Arm/Disarm, Driver's Priority Unlock, Door Sense Trigger Output(-), Trunk (Lincoln LS ONLY), Parking Lights, Rear Defogger, Heated Mirrors, RAP Control

Downloadable Firmware for Platform #510: AMDL,FODL,GMDL6, HODL4, HYDL, KIADL, KIADL2, TOYDL,VWDL2

**WARNING:** Before beginning your install go to [www.INTELLIKITS.com](http://www.INTELLIKITS.com) and be sure to print the LATEST corresponding installation manual for the firmware that is flashed to the platform you are using.

### Section A See Wire Connection Guide for detailed information regarding wire functionality

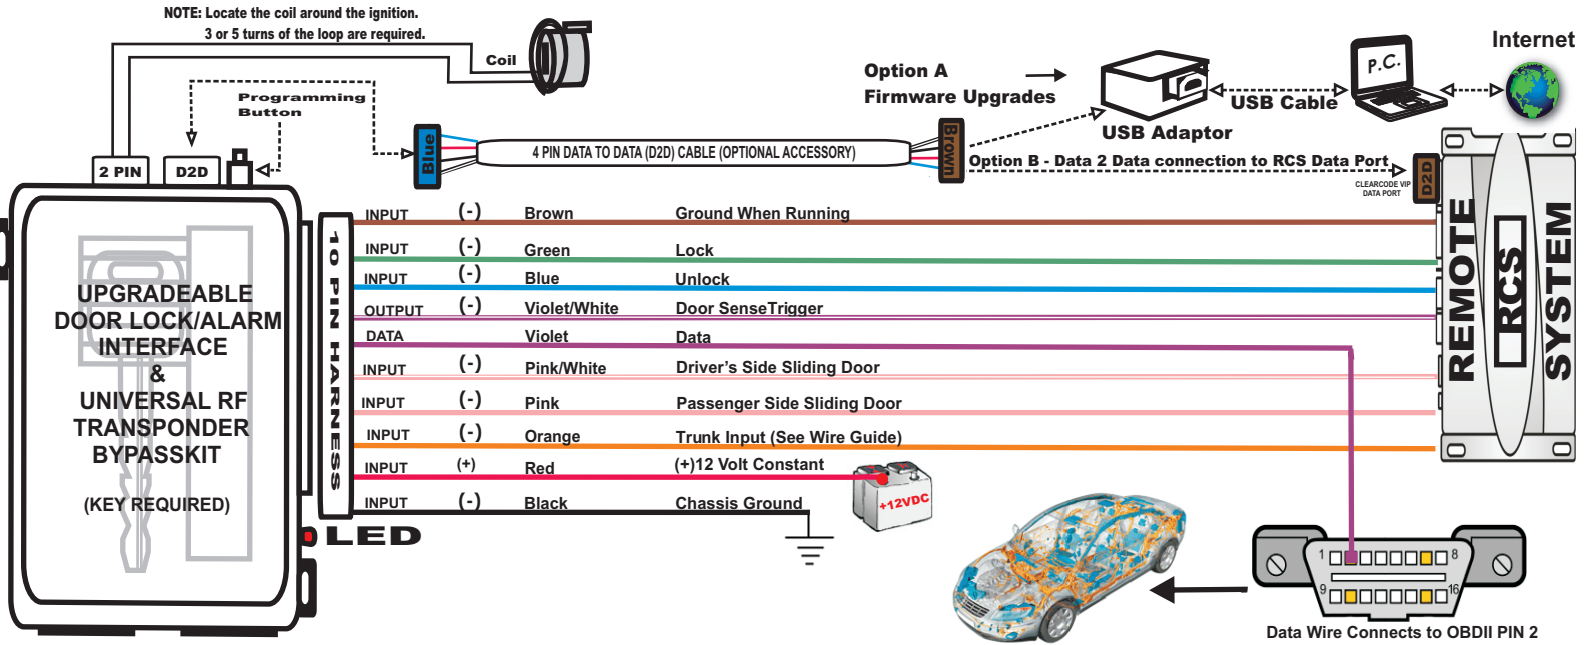

"Fig. 1"

### Section B WIRE GUIDE: CONNECTIONS

10 PIN HARNESS → D2D = Optional use of 4 Pin Data to Data (D2D) cable will replace the analogue wire (w2w) connection

PIN#	WIRE COLOR	D2D w2w	I/O STATUS	(-) / (+)	Connect Location	SPECIFIC WIRE CONNECTION LOCATION	ACTIVATION and/or FUNCTIONALITY
1	Brown	w2w	Input	(-)	RCS	Ground When Running output of remote starter	RF Transponder Bypass + OEM Security Arm/Disarm
2	Green	D2D w2w	Input	(-)	RCS	Connect to (-) Lock Output wire of RCS	Lock All Doors
3	Blue	D2D w2w	Input	(-)	RCS	Connect to (-) Unlock Output wire of RCS	Unlocks All Doors
4	Violet/White	D2D w2w	Output	(-)	RCS	Door Sense Trigger connects to (-) door trigger input wire of RCS	Detects Doors status (open/closed) via data bus then converts to an analogue output (-)
5	Violet	w2w	Data		Vehicle	On Board Diagnostic Connector (OBDII) PIN2 Located Under Dash on Driver Side (See Fig.1)	Data Commands from Module to Vehicle
6	Pink/White	D2D w2w	Input	(-)	RCS	AUX Output for Driver's Side Sliding Door	1 sec (-) Pulse Driver's Side Door Open/Close (Ford Windstar ONLY)
7	Pink	D2D w2w	Input	(-)	RCS	AUX Output for Passenger's Side Sliding Door	1 sec (-) Pulse Passenger's Side Door Open/Close (Ford Windstar ONLY)
8	Orange	D2D w2w	Input	(-)	RCS	Connect to (-) Trunk Release Output wire of RCS	Trunk Release (Lincoln LS ONLY)
9	Red	D2D w2w	Input	(+)	Vehicle	Constant (+) 12 Volt Source	Power Source
10	Black	D2D w2w	Input	(-)	Vehicle	Chassis Ground	Ground Source

**Legend** RCS = Remote Control System N/C = No Connection N/A = Not Applicable w2w= analogue wire to wire D2D= data 2 data

DATA to DATA PORT (D2D): Blue connector of D2D Cable plugs into the upgradeable vehicle interface module.

OPTION A: - D2D Port used to connect to USB Bootloader adaptor & computer to download & flash vehicle interface firmware.

OPTION B: - D2D Port used to connect to the data port of a remote control system equipped with ClearCode Vehicle Interface Protocol.

Remote control systems designed with ClearCode VIP can securely communicate via the D2D cable to transmit & receive data commands which initiate specific vehicle function such as doorlocks & immobilizer override and /or request information from the vehicle such as status of entry points (doors) or ambient temperature, diesel glow plug etc... ClearCode VIP represents the doorway to vehicle integration...When using D2D cable on a Combo kit which includes RF Transponder Bypass, the Brown GWR wire (10 pin), is a required connection.

## Description: Ford Doorlock and Alarm Interface & RF Transponder Bypass (KEY REQUIRED)

**Functions:** Lock/Unlock, Power Sliding Doors (Lft & Rt), OEM Security Arm/Disarm, Driver's Priority Unlock, Door Sense Trigger Output(-), Trunk (Lincoln LS ONLY), Parking Lights, Rear Defogger, Heated Mirrors, RAP Control

### Section C

## UNIVERSAL TRANSPONDER INSTALLATION:

- 1) Once the wires have been connected properly, open box and insert key inside wire loop, now close box.
- 2) Wrap coil loop around Key Cylinder, 3 to 5 turns of the loop is required. Installation is complete.

### Section D

## VEHICLE PROGRAMMING:

Once the module has been properly connected, turn key to **ON** position. Horn will honk 1 to 5 times and/or parking lights will flash indicating a successful connection.

### Section E

## USER SETTINGS - OPTIONAL PROGRAMMING:

*USER MODES are identified by a slow LED flash pattern. 1 slow flash=Mode1, 2 slow flashes=Mode 2 etc.*

- 1) Key "OFF" position, **press** and **hold** program button for 2 seconds, LED will flash rapidly for 2 seconds. Release button, LED will identify the MODE selection with a slow flash pattern (1- 8 slow flashes) and then will identify OPTION selection with a fast flash pattern. (1 or 2 fast flashes)
- 2) To change **MODE**, **push button** one time, LED will confirm **MODE** with slow flash pattern (1-8 slow flashes).
- 3) To change OPTION SELECTION within a MODE, **press LOCK or UNLOCK** button on the aftermarket remote control system. LED will identify option selection with either one or two fast flashes.
- 4) To save and exit programming, **press** and **hold button** until LED flashes one time rapidly, showing end of OPTION programming.

\* = Default

**MODE 1 = \*OPTION 1:** 1st Pulse Unlock All Doors (Default) **OPTION 2:** 1st Pulse Unlock Driver Door, 2nd Pulse Unlock All Doors

**Reset MODE 8 =** Press lock or unlock button on aftermarket remote, LED will flash 8 times slowly and twice rapidly. Push programming button 1 time, LED will flash one time. Reset is complete.

### Section F

## VEHICLE COMPATIBILITY CHART

VEHICLE	2003	2002	2001	2000	1999
Ford Windstar	✓	✓	✓	✓	✓
Lincoln LS	✓	✓	✓	✓	N/A