Platform # 530

Firmware: CHDL2

Installation Manual (1\2 Pages)

Description: Chrysler Sedan Doorlock Alarm & Interface: Intrepid (CHDL2) Door Lock & Alarm Interface (KEY REQUIRED)


Functions: Data Bus Interface: Lock/Unlock, Trunk, OEM Security Arm/Disarm

Downloadable Firmware for Platform #530: CHDL2, CHDL3, CHDL4, CHDL6+, CHDL7, JDL

WARNING: Before beginning your install go to www.INTELLIKITS.com and be sure to print the LATEST corresponding installation manual for the firmware that is flashed to the platform you are using.

Section A

See Wire Connection Guide for detailed information regarding wire functionality

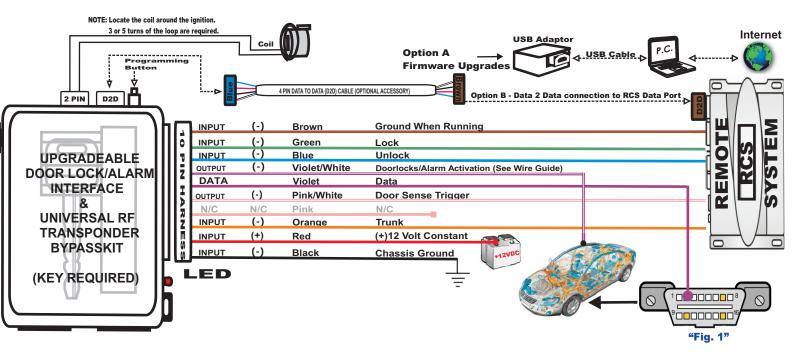

Section B

WIRE GUIDE: CONNECTIONS

r⊳ D2D = Optional use of 4 Pin Data to Data (D2D) cable will replace the analogue wire (w2w) connection **10 PIN HARNESS**

PIN#	WIRE COLOR	VEHICLE TYPE	D2D w2w	I/O STATUS	(-) /(+)	Connect Location		ACTIVATION and/or FUNCTIONALITY
1	Brown	N/A	w2w	Input	(-)	RCS	Ground When Running from output of remote starter.	Factory Alarm Arm/ Disarm + RF Transponder Bypass
2	Green	N/A	D2D w2w	Input	(-)	RCS	Connect to (-) Lock Ouput wire of RCS	Lock All Doors
3	Blue	N/A	D2D w2w	Input	(-)	RCS	Connect to (-) Unlock Output wire of RCS	Unlocks All Doors
4	Violet/White	N/A	w2w	Output	(-)	Vehicle	BCM Located Behind Fuse Box on Driver Side (See Tech Notes)	Activates Doorlocks and Alarm
5	Violet	N/A	w2w	Data		Vehicle	On Board Diagnostic Connector (OBDII) PIN 2 Face View Under Dash on Driver Side (See Fig.1)	Data Commands from Module to Vehicle
6	Pink/White	N/A	D2D w2w	Output	(-)	RCS	Connect to (-) door trigger input wire of RCS	Detects Doors status (open/closed) via data bus then converts to an analogue output (-)
7	Pink	N/C	N/C	N/C	N/C	N/C	N/C	N/C
8	Orange	N/A	D2D w2w	Input	(-)	RCS	Trunk Output	Opens Trunk
9	Red	N/A	D2D w2w	Input	(+)	Vehicle	Constant (+) 12 Volt Source	Power Source
10	Black	N/A	D2D w2w	Input	(-)	Vehicle	Chassis Ground	Ground Source
10	Legend RCS = Remote Control System					-m	N/C = No Connection $N/A = Not Applicable$	W2W= analogue wire to wire D2D= data 2 data

N/A = Not Applicable W2W= analogue wire to wire D2D= data 2 data

DATA to DATA PORT (D2D): Blue connector of D2D Cable plugs into the upgradeable vehicle interface module.

OPTION A: - D2D Port used to connect to USB Bootloader adaptor & computer to download & flash vehicle interface firmware.

OPTION B: - D2D Port used to connect to the data port of a remote control system equipped with ClearCode Vehicle Interface Protocol.

Remote control systems designed with ClearCode VIP can securely communicate via the D2D cable to transmit & receive data commands which initiate specific vehicle function such as doorlocks & immobilizer override and /or request information from the vehicle such as status of entry points (doors) or ambiant température, diesel glow plug etc... ClearCode VIP represents the doorway to vehicle integration...When using D2D cable on a Combo kit which includes RF Transponder Bypass, the Brown GWR wire (10 pin) is a required connection.

Platform # 530 Firm

Firmware: CHDL2

Installation Manual (2\2 Pages)

Description: Chrysler Sedan Doorlock Alarm & Interface : Intrepid (CHDL2) Door Lock & Alarm Interface (KEY REQUIRED)

Functions: Data Bus Interface: Lock/Unlock, Trunk, OEM Security Arm/Disarm

Section C

UNIVERSAL TRANSPONDER INSTALLATION:

- 1) Once the wires have been connected properly, open box and insert key inside wire loop, now close box.
- 2) Wrap coil loop around Key Cylinder, 3 to 5 turns of the loop is required. Installation is complete.

Section D

VEHICLE PROGRAMMING:

- 1) Once the module has been properly connected, LED comes ON.
- 2) Turn key ON, LED will turn OFF. Module is now programmed.

Section E

USER SETTINGS - OPTIONAL PROGRAMMING:

USER MODES are identified by a slow LED flash pattern. 1 slow flash=Mode1, 2 slow flashes=Mode 2 etc.

- 1) Key "OFF" position, press and hold program button for 2 seconds, LED will flash rapidly for 2 seconds. Release button, LED will identify the MODE selection with a slow flash pattern (1- 8 slow flashes) and then will identify OPTION selection with a fast flash pattern. (1 or 2 fast flashes)
- 2) To change MODE, push button one time, LED will confirm MODE with slow flash pattern (1-8 slow flashes).
- 3) To change OPTION SELECTION within a MODE, press LOCK or UNLOCK button on the aftermarket remote control system. LED will identify option selection with either one or two fast flashes.
- 4) To save and exit programming, press and hold button until LED flashes one time rapidly, showing end of OPTION programming.

* = Default

MODE 7 =	*OPTION 1: Vehicle with alarm (Default)	OPTION 2: Vehicle without alarm
MODE 8 =	*OPTION 1: No reset (Default)	OPTION 2: Complete reset of option and module

Section F

TECH NOTES FOR VIOLET/WHITE WIRE

DO NOT ADD RESISTOR'S AS THEY ARE INTERNAL

DOORLOCKS/ALARM ACTIVATION WIRE

SEBRING SEDAN: White/Dark Green at BCM
ALL OTHER MODELS: Light Green/Orange at BCM

IMPORTANT:

- *On Sebring and Stratus Coupes, you can NOT control the alarm.
- *On Sebring and Stratus Sedan, you CAN control the alarm.
- *Do not install module on a metal service.