

# Directed Digital System

## CHRYSLER Firmware Specific Guide

This product is intended for installation by a professional installer only! Attempts to install this product by a person other than a trained professional may result in severe damage to a vehicle's electrical system and components.

# DIRECTED®

© 2015 Directed, Vista, CA  
Directed Digital System 2016-01

# Contents

---

Warning! Safety first .....	3
Introduction .....	4
Vehicle application guide .....	4
Wiring connections .....	5
Main power harness (H1), 12-pin thick gauge connector .....	5
Auxiliary output harness (H2), 16-pin black connector .....	5
Analog harness (H3), 18-pin white connector .....	6
MC501 harness (H4), 8 thick-gauge wires (ONLY for Type 5).....	6
Installation.....	7
Type 1 (without T-harness).....	7
Type 1 (with T-harness THCHC1) .....	8
Type 2 (without T-harness).....	9
Type 2 (with T-harness THCHC1) .....	10
Type 3 (without T-harness).....	11
Type 3 (with T-harness THCHC2) .....	12
Type 4 .....	13
Type 5 .....	14
Vehicle wiring reference charts .....	15
Installation Type 1 .....	15
Installation Type 2 .....	16
Installation Type 3 .....	17
Installation Type 4 .....	18
Installation Type 5 .....	19
Connecting the module .....	20
Important! .....	20
Manual or automatic transmission selection .....	20
Optional sensors .....	21
RF kits .....	21
When used in conjunction with SmartStart.....	21
Module programming .....	22
LED diagnostics and troubleshooting.....	24
Module reset .....	26
Hard reset .....	26
Learning the Tach (not needed with Virtual Tach) .....	27
Initializing Virtual Tach (not needed with hardwired or data tach applications) .....	27
Limited lifetime consumer warranty .....	28
Quick Reference Guide – Viper, Clifford, Python, Avital & Automate (Regular Key).....	29
Quick Reference Guide – Autostart (Regular Key).....	31
Quick Reference Guide – Viper, Clifford, Python, Avital & Automate (Smart Key) .....	33
Quick Reference Guide – Autostart (Smart Key) .....	35

## Warning! Safety first

---

 The following safety warnings must be observed at all times:

- Due to the complexity of this system, installation of this product must only be performed by an authorized Directed dealer.
- When properly installed, this system can start the vehicle via a command signal from the remote control. Therefore, never operate the system in an area that does not have adequate ventilation.

The following precautions are the sole responsibility of the user; however, authorized Directed dealers should:

- Never use a test light or logic probe when installing this unit. Always use a multimeter.
- Never operate the system in an enclosed or partially enclosed area without ventilation (such as a garage).
- When parking in an enclosed or partially enclosed area or when having the vehicle serviced, the remote start system must be disabled using the installed toggle switch. It is the user's sole responsibility to properly handle and keep out of reach from children all remote controls to assure that the system does not unintentionally remote start the vehicle.
- USER MUST INSTALL A CARBON MONOXIDE DETECTOR IN OR ABOUT THE LIVING AREA ADJACENT TO THE VEHICLE. ALL DOORS LEADING FROM ADJACENT LIVING AREAS TO THE ENCLOSED OR PARTIALLY ENCLOSED VEHICLE STORAGE AREA MUST REMAIN CLOSED AT ALL TIMES.

Use of this product in a manner contrary to its intended mode of operation may result in property damage, personal injury, or death. Except when performing the Safety Check outlined in this installation guide, (1) Never remotely start the vehicle with the vehicle in gear, and (2) Never remotely start the vehicle with the keys in the ignition. The user is responsible for having the neutral safety feature of the vehicle periodically checked, wherein the vehicle must not remotely start while the car is in gear. This testing should be performed by an authorized Directed dealer in accordance with the Safety Check outlined in this product installation guide. If the vehicle starts in gear, cease remote start operation immediately and consult with the user to fix the problem immediately.

OPERATION OF THE REMOTE START MODULE IF THE VEHICLE STARTS IN GEAR IS CONTRARY TO ITS INTENDED MODE OF OPERATION. OPERATING THE REMOTE START SYSTEM UNDER THESE CONDITIONS MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY. IMMEDIATELY CEASE THE USE OF THE UNIT AND REPAIR OR DISCONNECT THE INSTALLED REMOTE START MODULE. DIRECTED WILL NOT BE HELD RESPONSIBLE OR PAY FOR INSTALLATION OR REINSTALLATION COSTS.

Remote starters for manual transmission pose significant risks if not properly installed and operated. When testing to ensure the installation is working properly, only remote start the vehicle in neutral gear, on a flat surface and with a functional, fully engaged parking brake. Do not allow anyone to stand in front of or behind the vehicle.

This product should not be installed in any convertible vehicles, soft or hard top with a manual transmission. Installation in such vehicles may pose certain risk.



## Wiring connections

The wiring connections listed below are specific to this firmware.

### Main power harness (H1), 12-pin thick gauge connector

Conn./Pin	Color	Description
H1/1	White	Relay 3 COM – Parking Light Output <sup>1</sup>
H1/2	White/Brown	Relay 3 N.O.– Parking Light Input <sup>1</sup>
H1/3	Brown/Red	Relay 2 N.O. – (+) Power 12V (Type 4)
H1/4	Yellow/Red	Relay 2 COM – (+) Start (Type 4)
H1/5	Orange/Red	Relay 2 N.C. – No Connection
H1/6	Yellow	Relay 1 COM – (+) Ignition (Car Side) (Types 1 & 2); (+) Ignition Output (Types 3 & 4) <sup>1</sup>
H1/7	White	Relay 3 COM – Parking Light Output <sup>1</sup>
H1/8	White/Brown	Relay 3 N.O.– Parking Light Input <sup>1</sup>
H1/9	Black	(-) Ground
H1/10	Red	(+) 12 Volt (Battery)
H1/11	Orange/Yellow	Relay 1 N.C. – (+) Ignition (connector side) (Types 1 & 2) <sup>1</sup>
H1/12	Brown	Relay 1 N.O.– (+) Power 12 Volt (Types 1-4) <sup>1</sup>

### Auxiliary output harness (H2), 16-pin black connector

Conn./Pin	Color	Description
H2/1	Violet/Brown	MUX - Parking Lights (Types 1&2); 2nd Starter Output (Types 3&4)
H2/2	Yellow/Black	RAP Off (Types 1-3)
H2/3	Orange/Black	No Connection
H2/4	Tan	HS CAN Low (Types 1 & 2); FT CAN Low (Types 3-5)
H2/5	Tan/Black	HS CAN High (Types 1 & 2); FT CAN High (Types 3-5)
H2/6	Light Green	No Connection
H2/7	Orange/Green	FT CAN High (Type 2); HS CAN High (Type 3)
H2/8	Orange/Brown	FT CAN Low (Type 2); HS CAN Low (Type 3)
H2/9	Violet/Green	No Connection
H2/10	Green/Black	No Connection <sup>2</sup>
H2/11	White/Violet	No Connection <sup>2</sup>
H2/12	White/Red	No Connection <sup>2</sup>
H2/13	Lt. Blue/Black	No Connection <sup>2</sup>
H2/14	Green/Red	No Connection <sup>2</sup>
H2/15	N/A	No Connection
H2/16	Violet/Yellow	No Connection

1. If these outputs are not used by the firmware, they can be configured by the installer when the module is flashed.
2. If these outputs are not used by the firmware, they can be configured by the installer when the module is flashed. Note that they are low current and a relay may be necessary.

## Analog harness (H3), 18-pin white connector

Conn./Pin	Color	Description
H3/1	Lt. Blue/Red	No Connection
H3/2	Black/White	(-) Parking Brake Input (Manual Transmission) <sup>2</sup>
H3/3	Gray	(-) Hood Input <sup>2</sup>
H3/4	N/A	No Connection
H3/5	Gray/Black	(+) Glow Plug Input <sup>2</sup>
H3/6	Violet/White	(AC) Tach Input <sup>2</sup>
H3/7	Dark Blue	No Connection <sup>1</sup>
H3/8	Brown/Black	No Connection <sup>1</sup>
H3/9	Red/White	No Connection <sup>1</sup>
H3/10	White/Green	(-) Door Input <sup>2</sup>
H3/11	Yellow/Green	(+) Door Input <sup>2</sup>
H3/12	Blue/Red	No Connection
H3/13	Light Blue	(-) Trunk Trigger Input <sup>2</sup>
H3/14	Pink/Yellow	(-) Start Trigger Input <sup>2</sup> (Type 1,2,3 without T-Harness)
H3/15	Dark Green	No Connection <sup>1</sup>
H3/16	Brown/White	(+) Brake Input <sup>2</sup>
H3/17	Brown	(+) Siren Output <sup>1</sup>
H3/18	Blue/White	(-) Keysense Output (Type 5) <sup>1</sup>

## MC501 harness (H4), 8 thick-gauge wires (ONLY for Type 5)


Conn./Pin	Color	Description
H4/1	Pink/White	(+) Ignition 2/Flex Relay Output <sup>3</sup>
H4/2	Red/White	(+) Fused (30A) Ignition 2/Flex Relay Input
H4/3	Pink	(+) Ignition Output (Also Input to Yellow in Ribbon Cable)
H4/4	Red	(+) 12 Volt (Battery) Input
H4/5	Orange	(+) Accessory Output
H4/6	Red	(+) 12 Volt (Battery) Input
H4/7	Green	Starter Input (From Key Switch) <sup>4</sup>
H4/8	Violet	(+) Starter Output (To Starter)

1. If these outputs are not used by the firmware, they can be configured by the installer when the module is flashed. Note that they are low current and a relay may be necessary.
2. These connections are only required if the corresponding statuses are not supported by the firmware. See "Vehicle application guide" on page 4 for a list of compatible features.
3. If these outputs are not used by the firmware, they can be configured by the installer when the module is flashed.
4. The Green wire is only required for starter kill and antigrind applications.

# Installation

## Type 1 (without T-harness)


 Refer to "Vehicle wiring reference charts" on page 15 for more information on vehicle-specific connections.

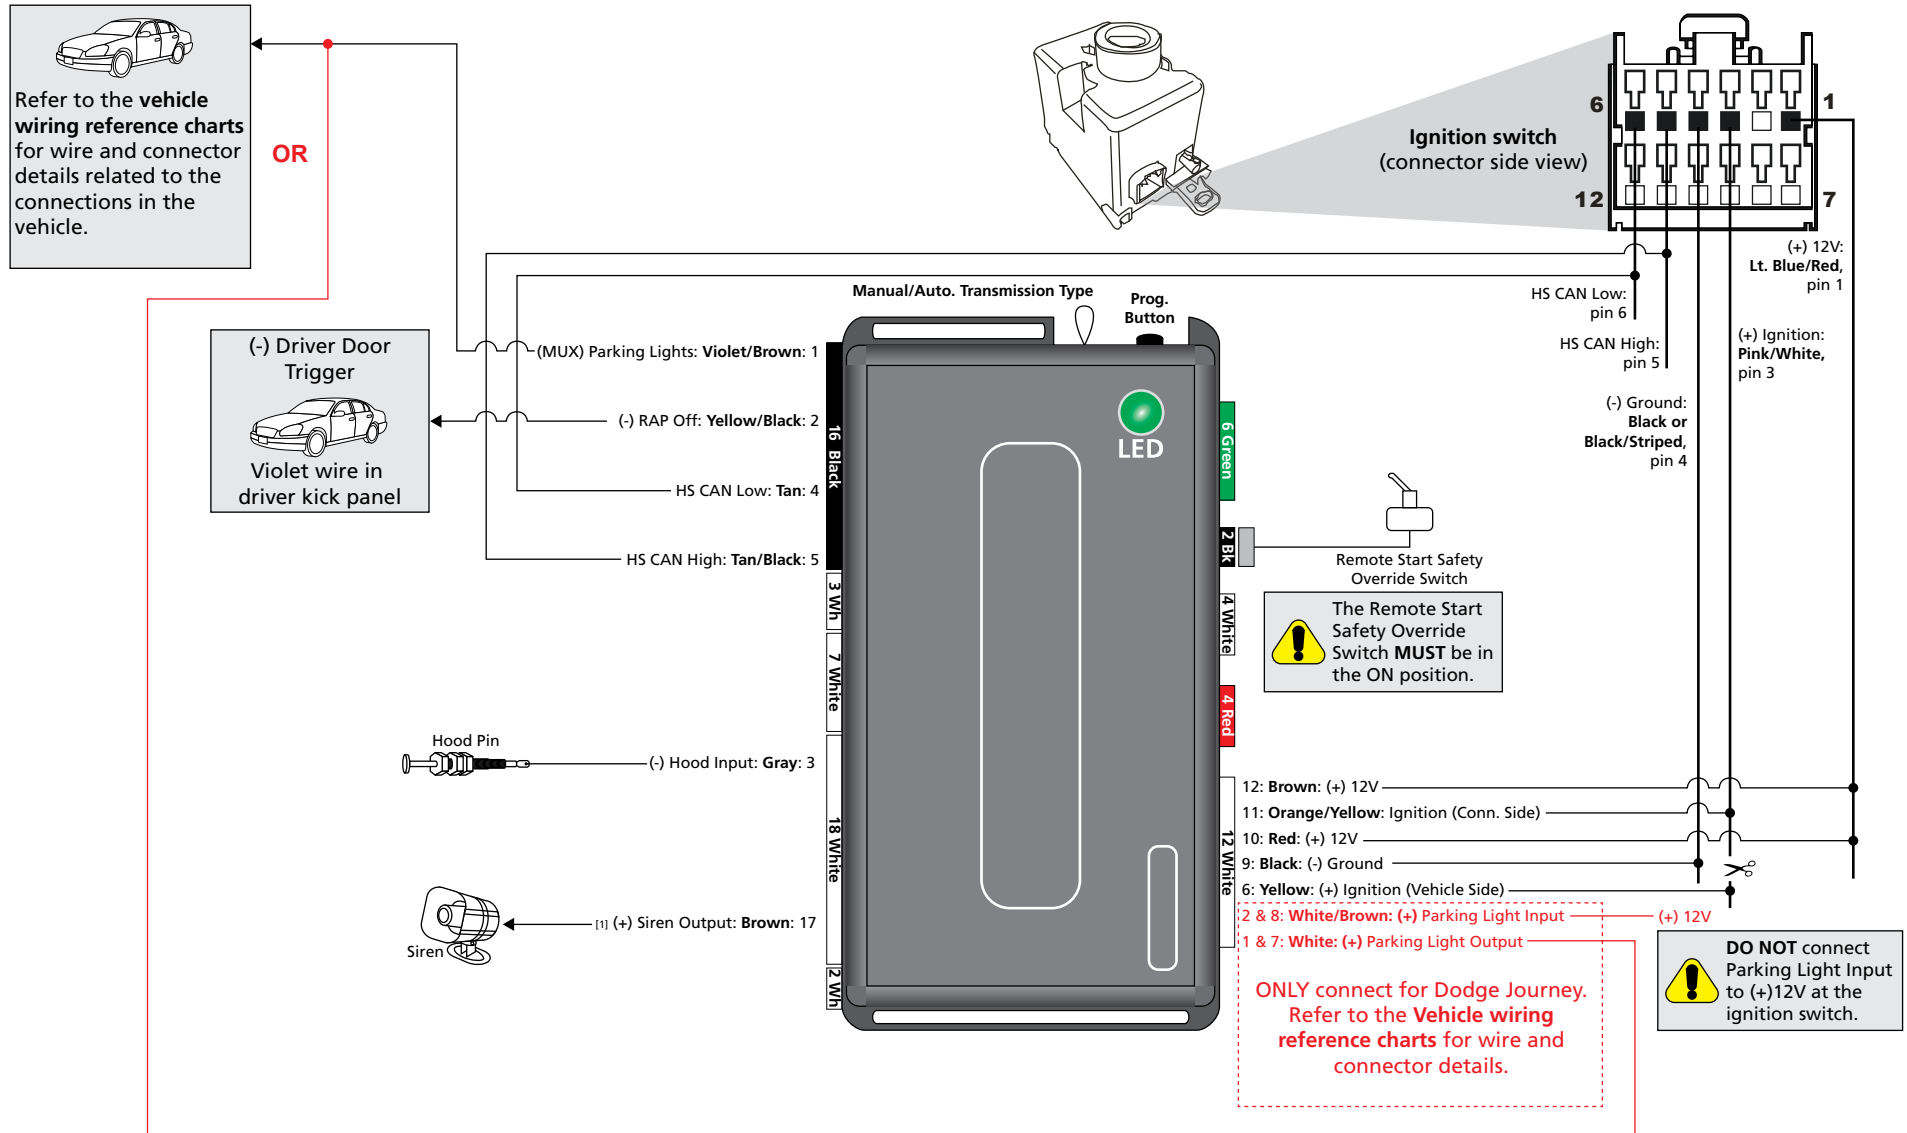

[1] The siren is optional.

# Type 1 (with T-harness THCHC1)

**!** Refer to "Vehicle wiring reference charts" on page 15 for more information on vehicle-specific connections.

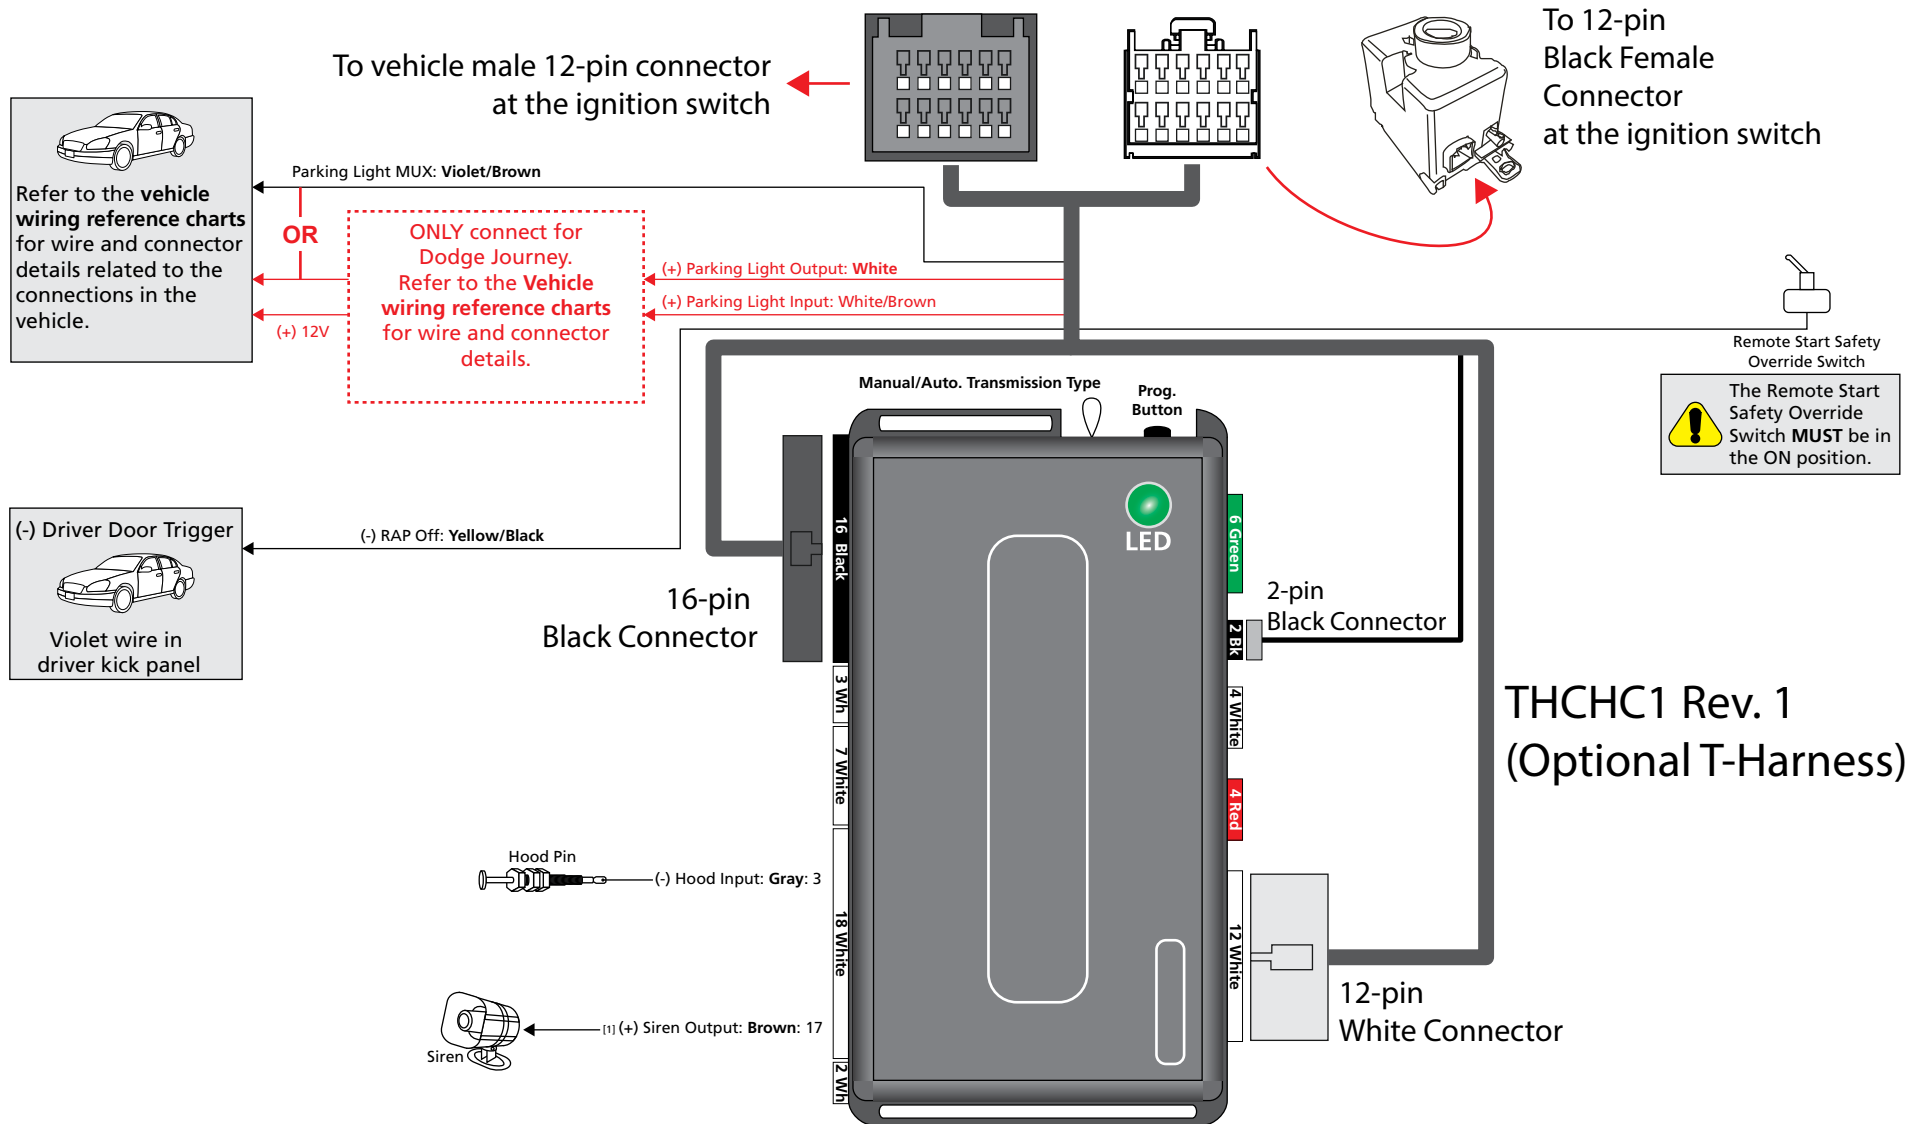


[1] The siren is optional.




## Type 2 (without T-harness)

 Refer to "Vehicle wiring reference charts" on page 16 for more information on vehicle-specific connections.

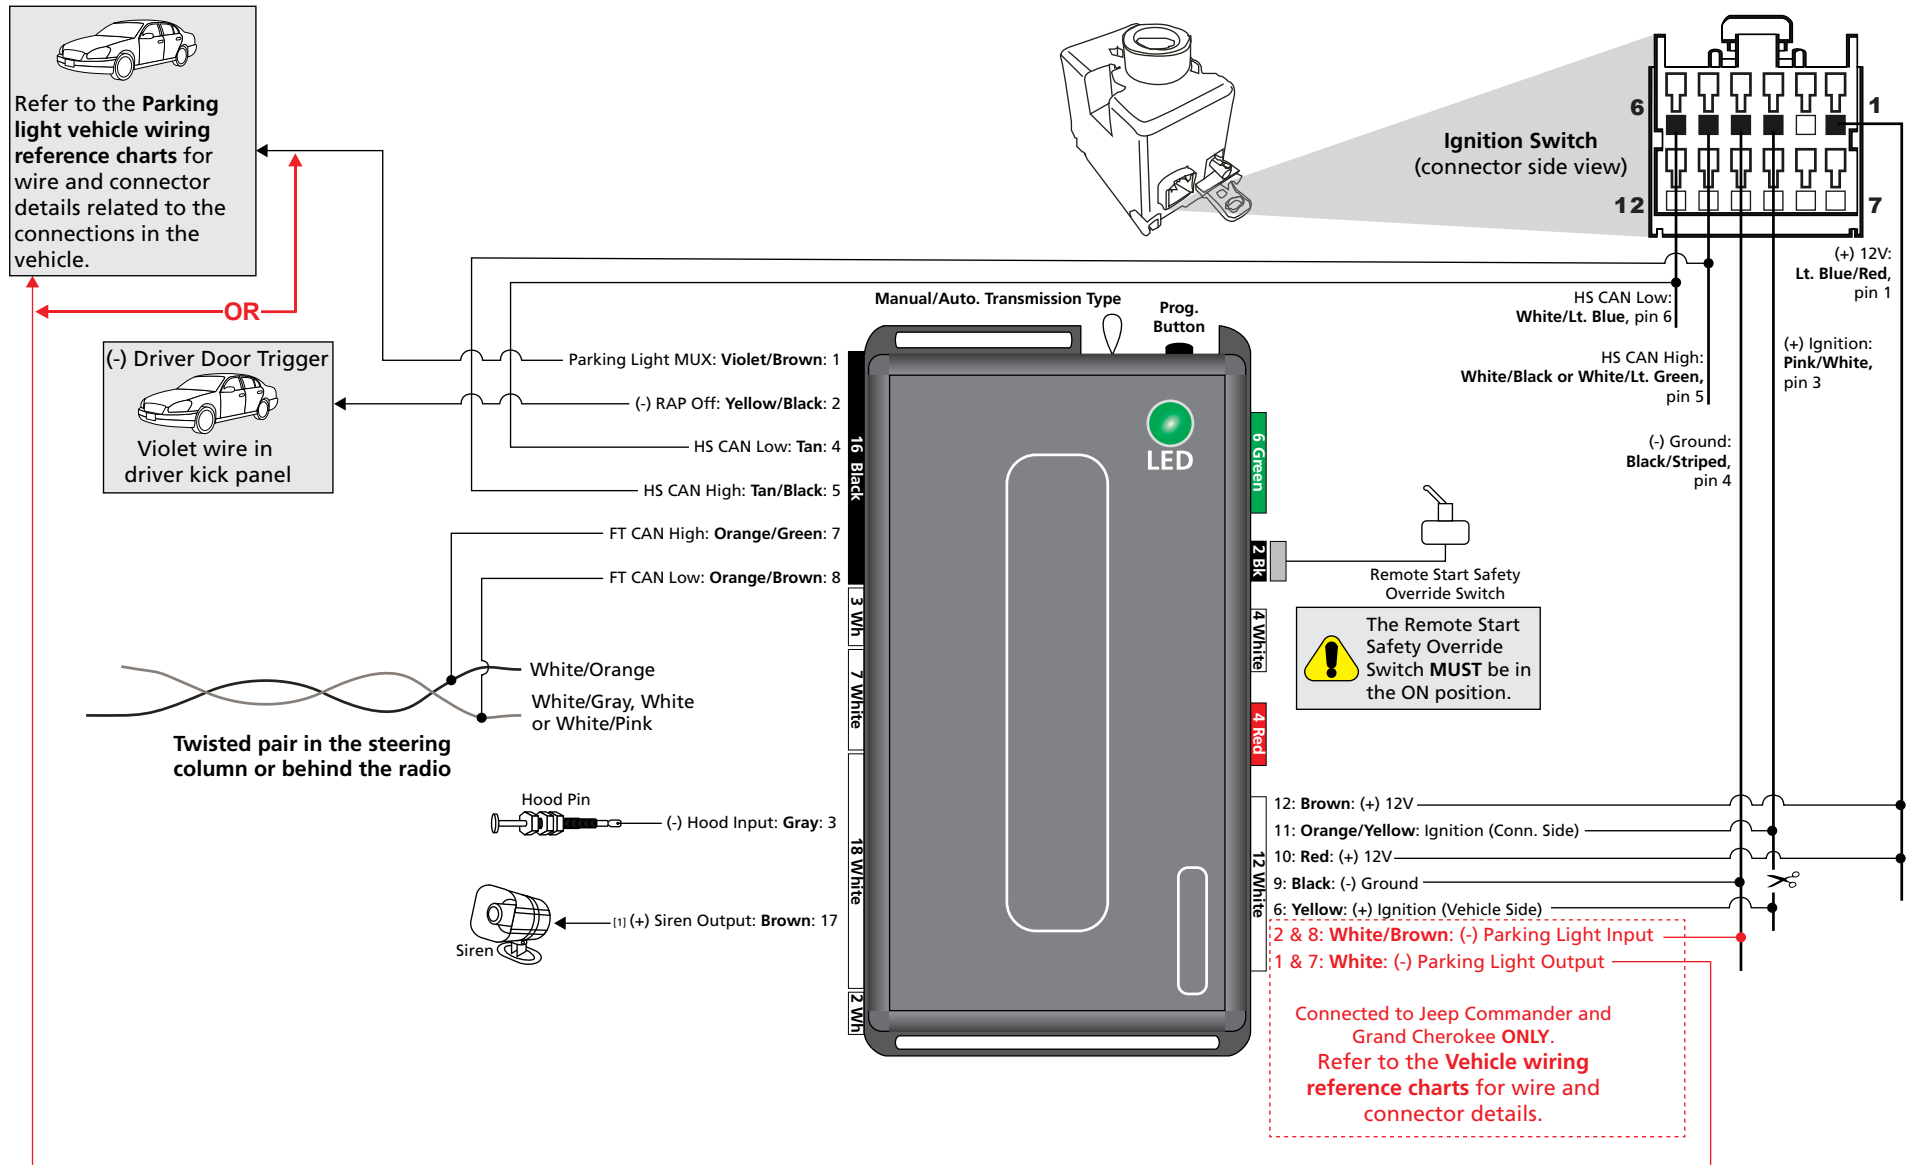


## Type 2 (with T-harness THCHC1)


 Refer to "Vehicle wiring reference charts" on page 16 for more information on vehicle-specific connections.

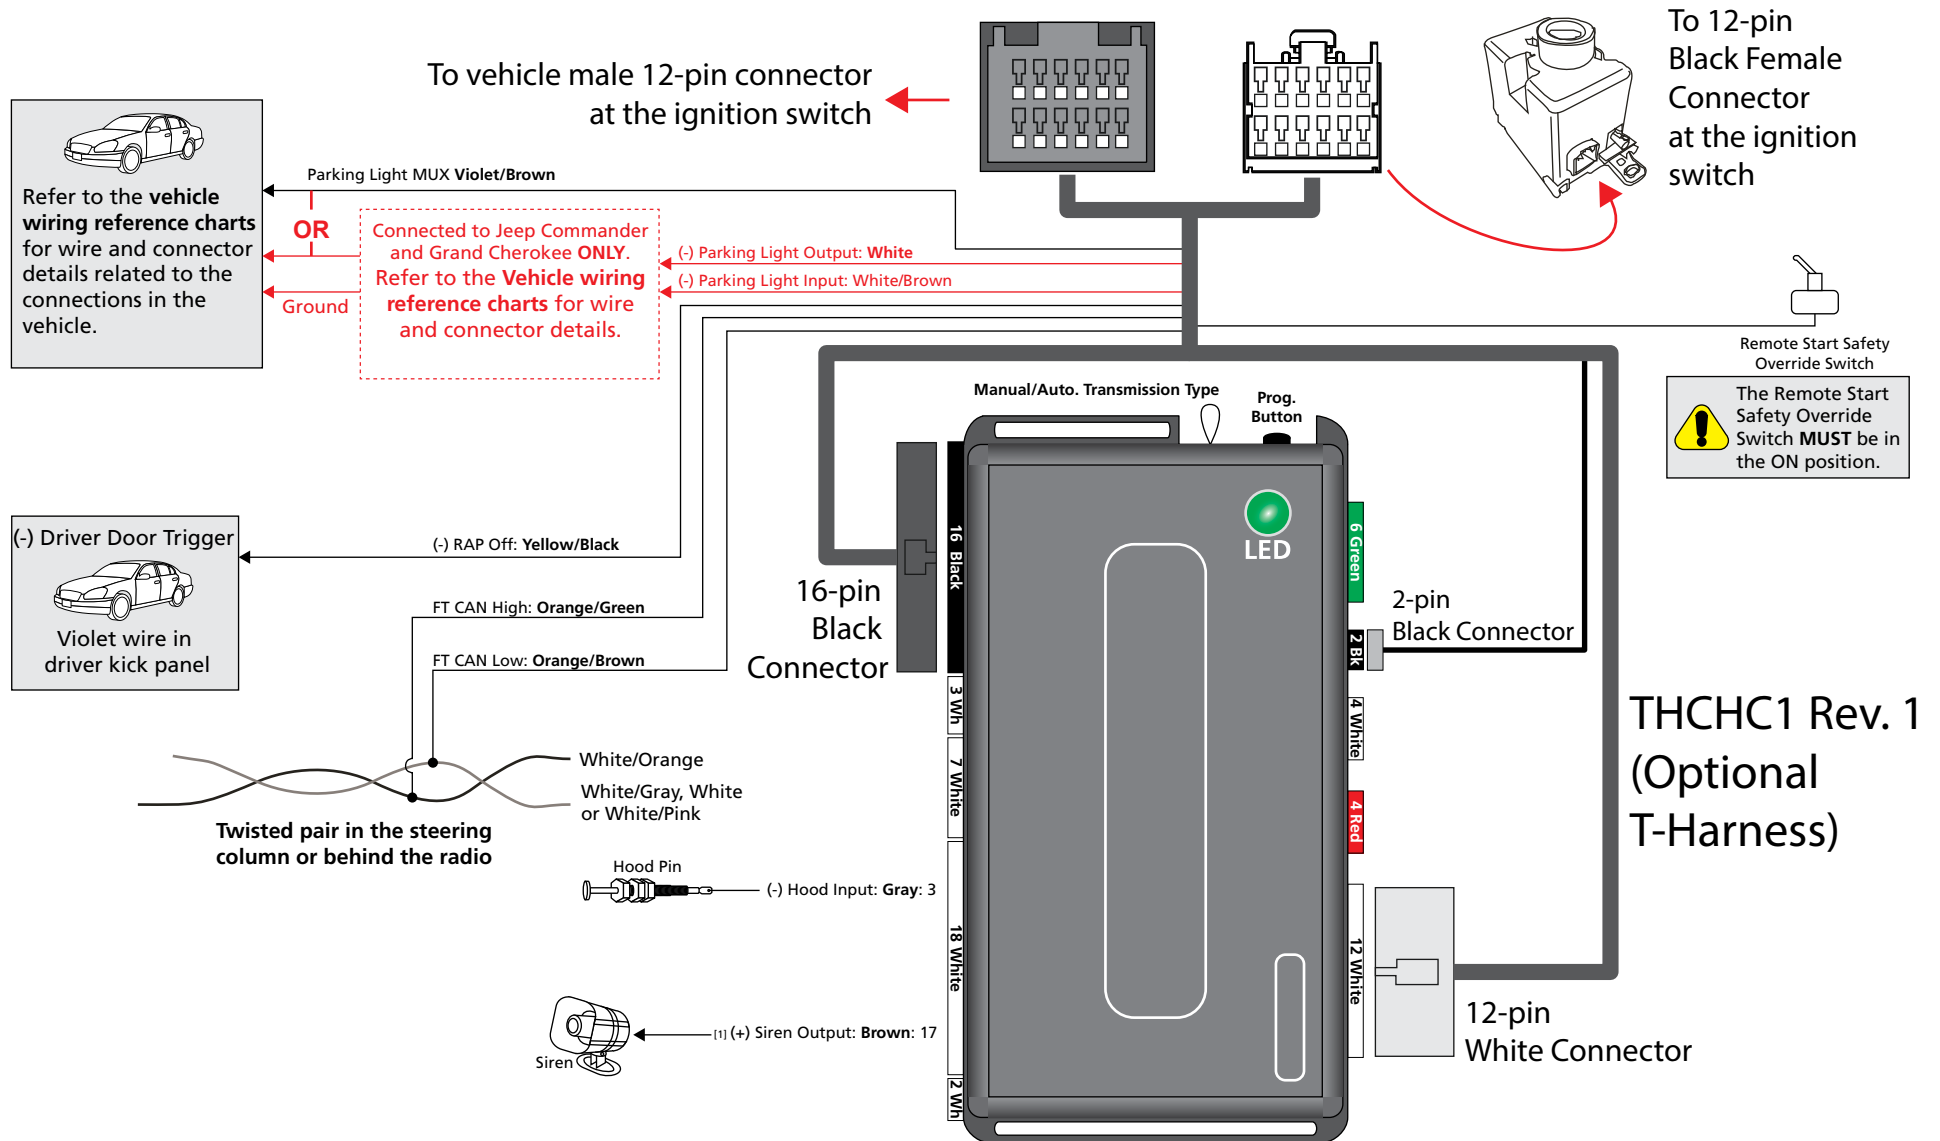

[1] The siren is optional.

## Type 3 (without T-harness)


 Refer to "Vehicle wiring reference charts" on page 17 for more information on vehicle-specific connections.

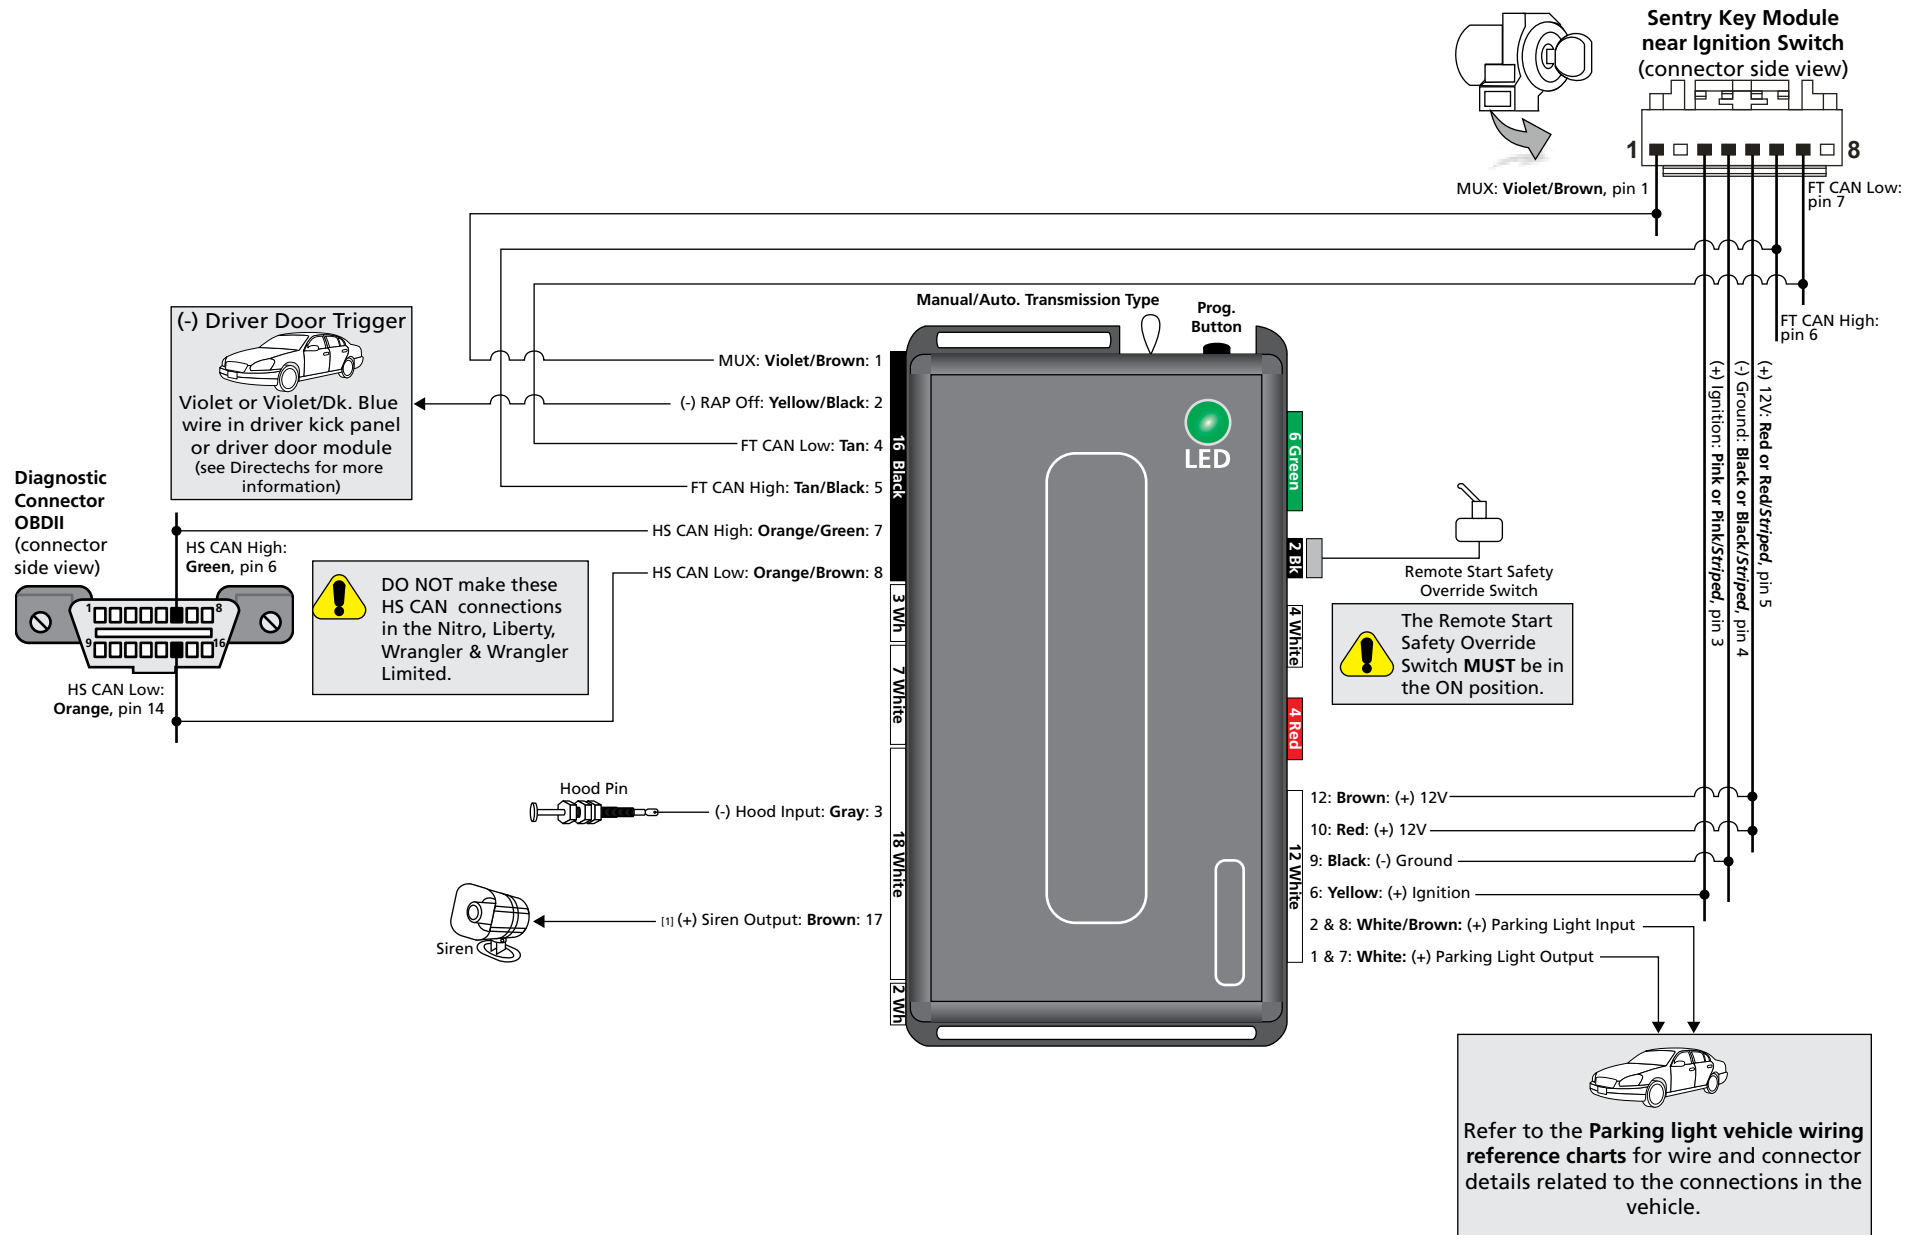

[1] The siren is optional.

## Type 3 (with T-harness THCHC2)


 Refer to "Vehicle wiring reference charts" on page 17 for more information on vehicle-specific connections.

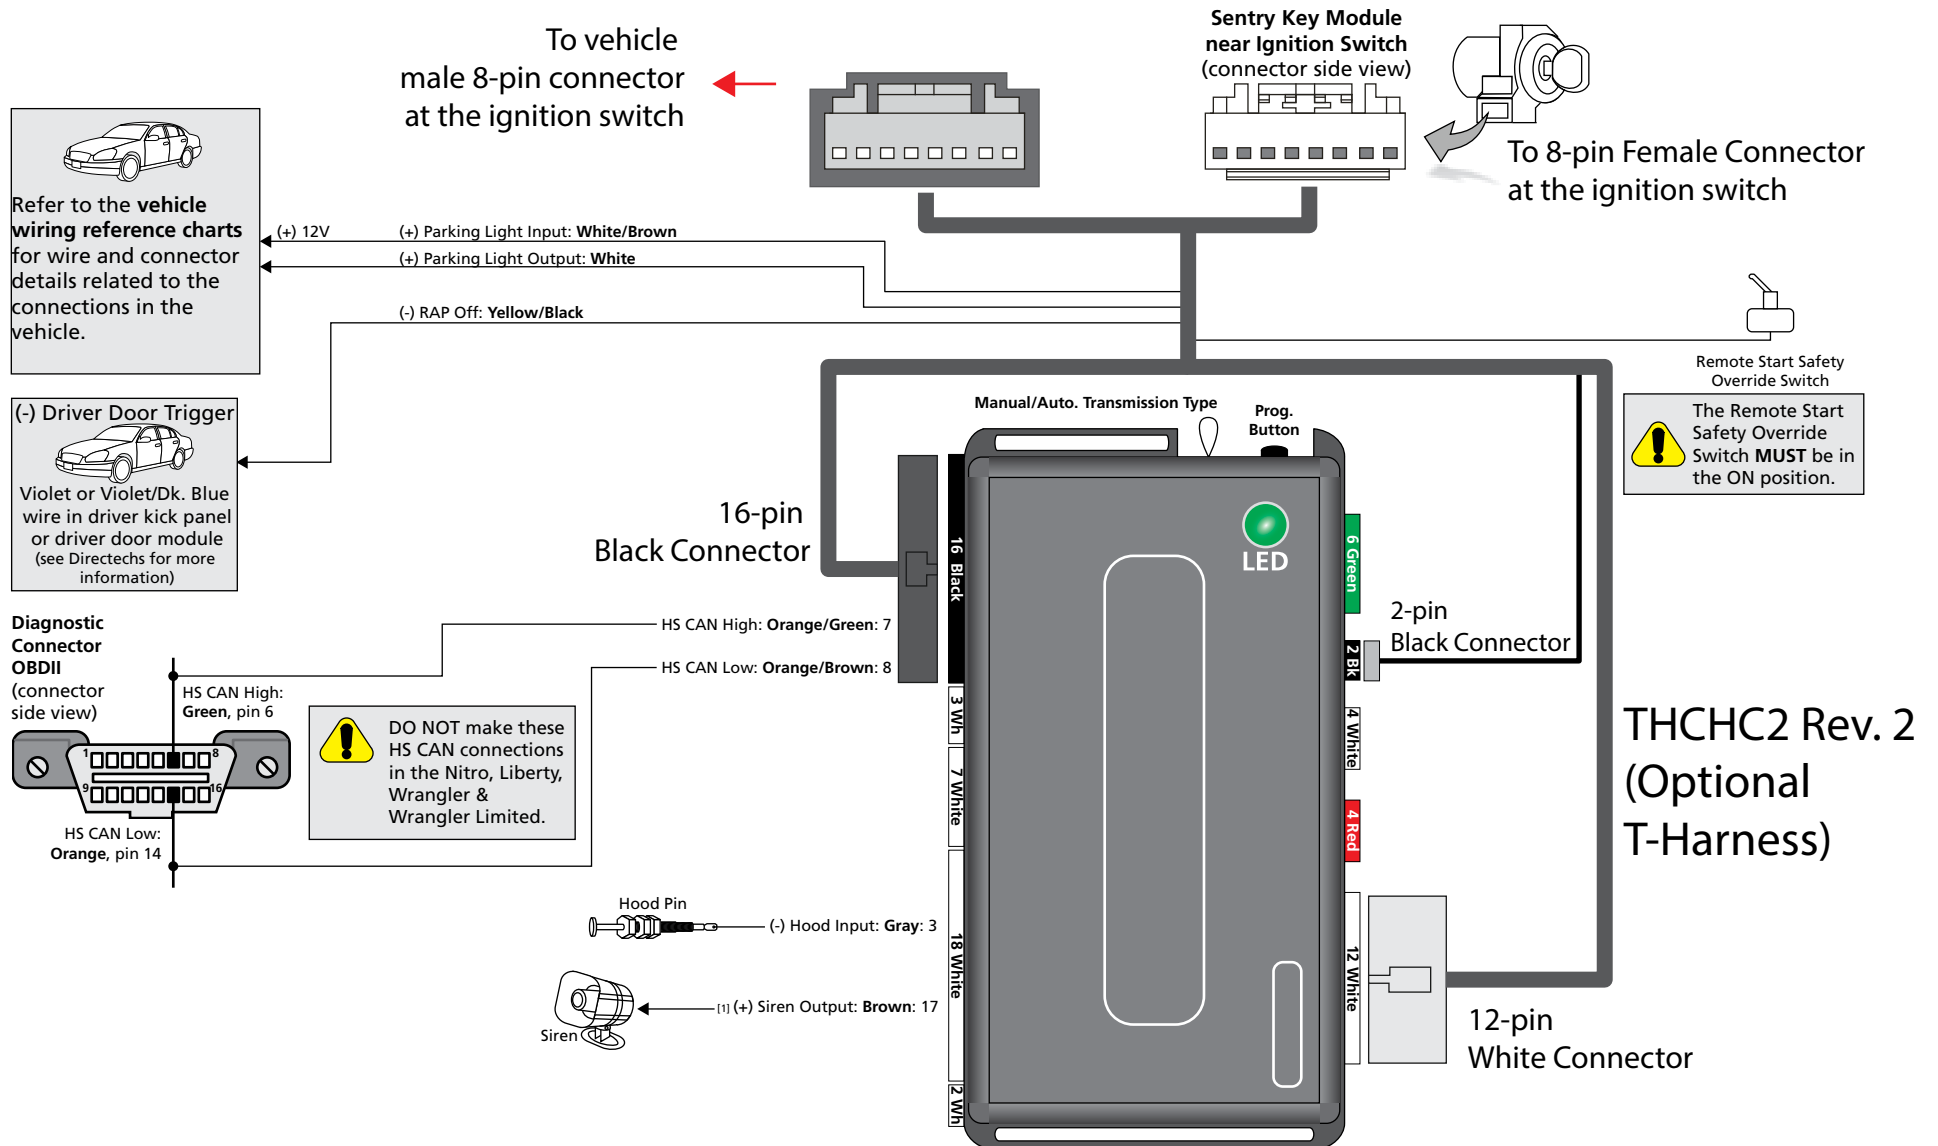

[1] The siren is optional.

# Type 4


 Refer to "Vehicle wiring reference charts" on page 18 for more information on vehicle-specific connections.

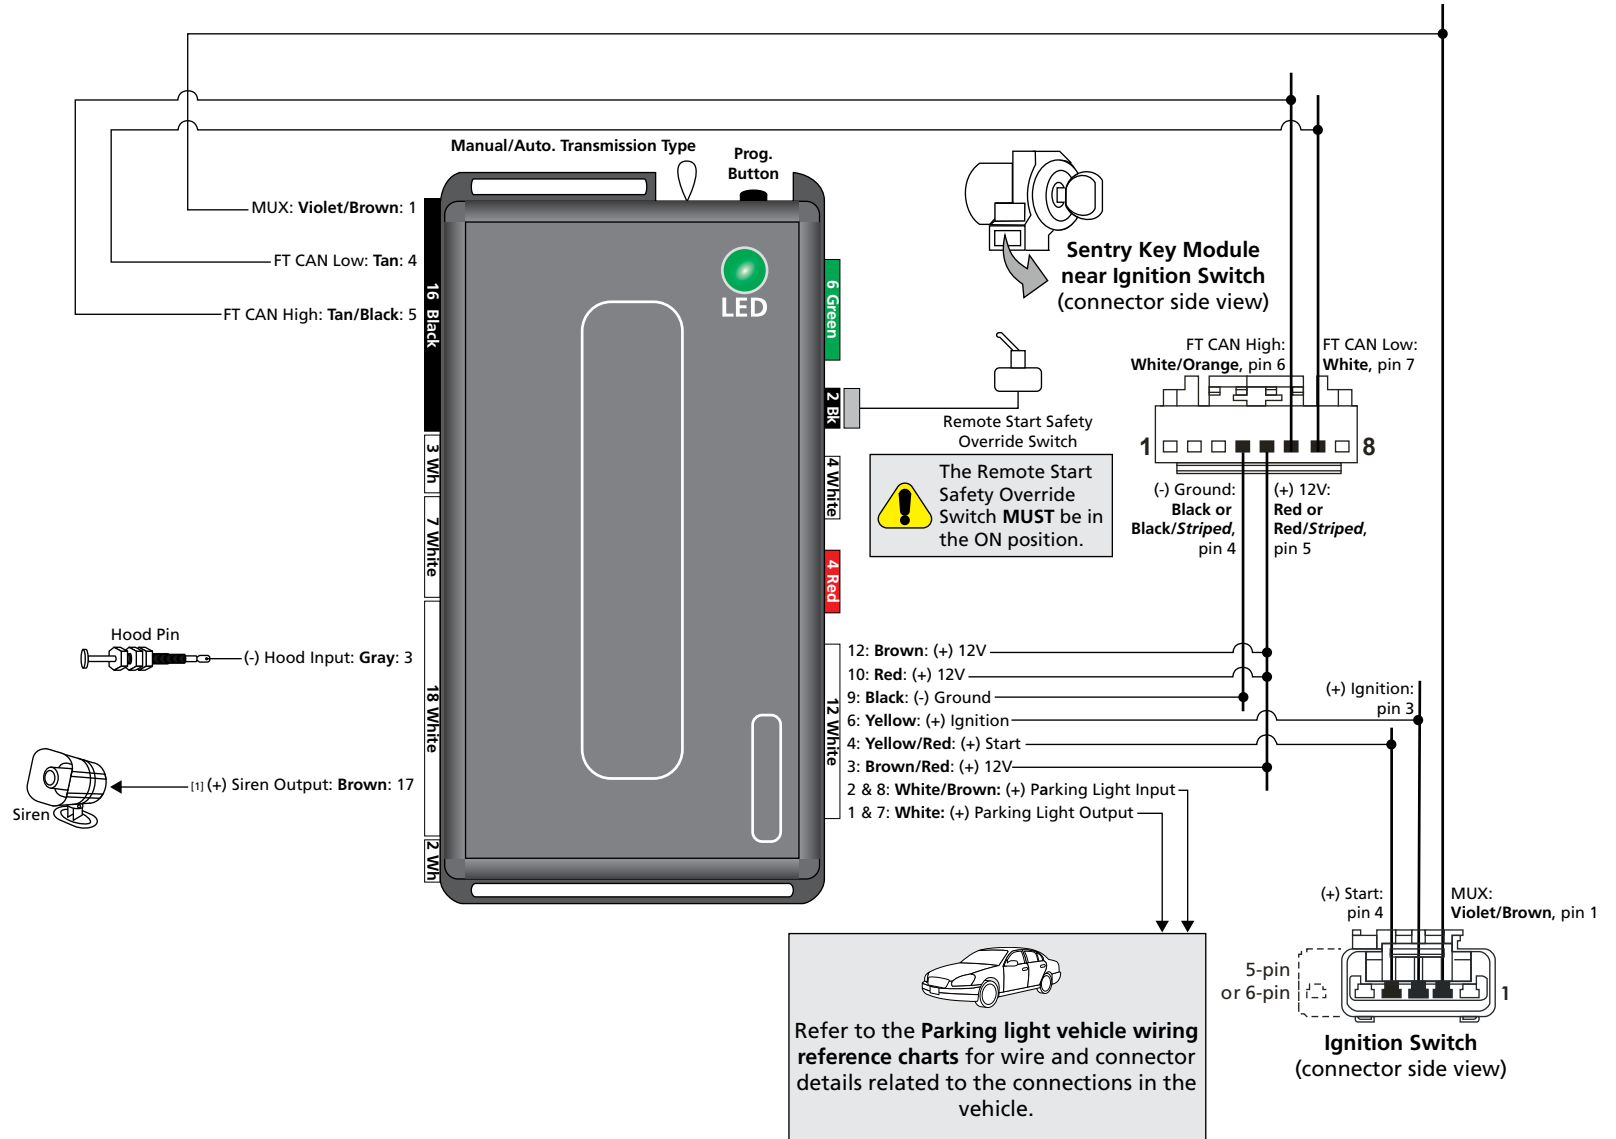

(1) The siren is optional.

# Type 5

 Refer to "Vehicle wiring reference charts" on page 19 for more information on vehicle-specific connections.

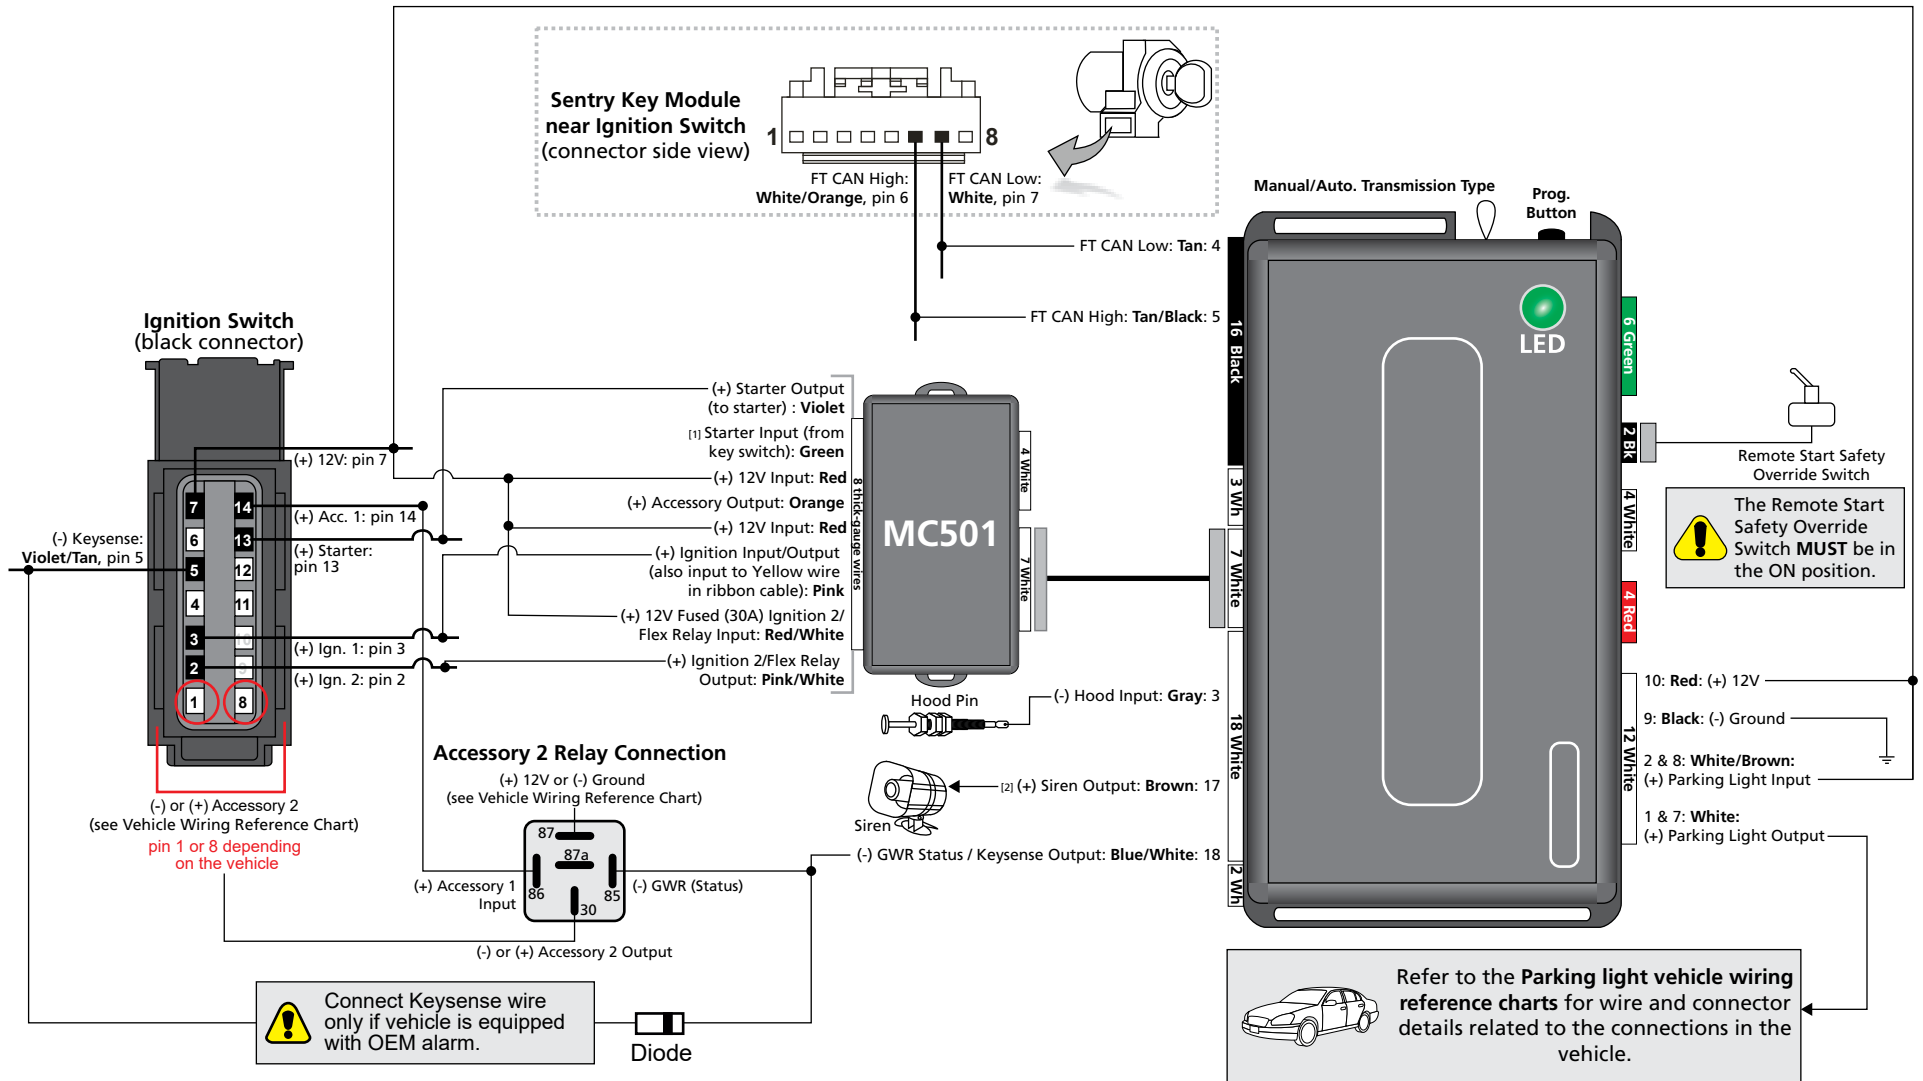


[1] The Green wire is only required for starter kill and antigrind connections.

[2] The siren is optional.

# Vehicle wiring reference charts

This section provides information on the following connections:


- "Installation Type 1"
- "Installation Type 2"
- "Installation Type 3"
- "Installation Type 4"
- "Installation Type 5"

 Refer to [www.directechs.com](http://www.directechs.com) for more information on any additional connections.


## Installation Type 1

Vehicle	Years	Vehicle Parking Light Wire	Polarity	Location on vehicle
<b>Chrysler</b>				
Town & Country	2011+	White/Green	MUX	Black connector at light switch, pin 3
Town & Country	2008-10	White/Brown	MUX	Black connector at light switch, pin 1
<b>Dodge/Ram</b>				
1500	2011+	White	MUX	Black connector at light switch, pin 1
2500	2011+	White	MUX	Black connector at light switch, pin 1
3500	2011+	White	MUX	Black connector at light switch, pin 1
C/V	2012-15	White/Green	MUX	Black connector at light switch, pin 3
Caravan	2008-10	White/Brown	MUX	Black connector at light switch, pin 1
Challenger	2008+	White/Brown	MUX	Black connector at light switch, pin 1
Challenger (Smart Key)	2008+	White/Brown	MUX	Black connector at light switch, pin 1
Durango	2011+	White/Green	MUX	Black connector at light switch, pin 3
Grand Caravan	2011+	White/Green	MUX	Black connector at light switch, pin 3
Grand Caravan	2008-10	White/Brown	MUX	Black connector at light switch, pin 1
Journey	2009-10	White/Violet	(+)	Passenger kick panel
RAM	2009-10	White	MUX	Black connector at light switch, pin 1
<b>Jeep</b>				
Grand Cherokee	2011+	White/Green	MUX	Black connector at light switch, pin 1
Grand Cherokee (Smart Key)	2011+	White/Green	MUX	Black connector at light switch, pin 1
<b>Volkswagen</b>				
Routan	2011+	White/Green	MUX	Black connector at light switch, pin 3
Routan	2009-10	White/Brown	MUX	Black connector at light switch, pin 1

Light switch, black 10-pin plug

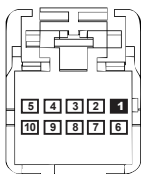

Light switch, black 6-pin plug





# Vehicle wiring reference charts (continued)

## Installation Type 2

Vehicle	Years	Vehicle Parking Light Wire	Polarity	Location on vehicle
<b>Chrysler</b>				
300/300c	2008-10	White/Brown	MUX	Black connector at light switch, pin 1
<b>Dodge</b>				
Charger	2008-10	White/Brown	MUX	Black connector at light switch, pin 1
Magnum	2008	White/Brown	MUX	Black connector at light switch, pin 1
<b>Jeep</b>				
Commander	2008-10	White/Dk. Blue	(-)	Hazard light switch
Grand Cherokee	2008-10	White/Dk. Blue	(-)	Hazard light switch

Light switch, black 10-pin plug

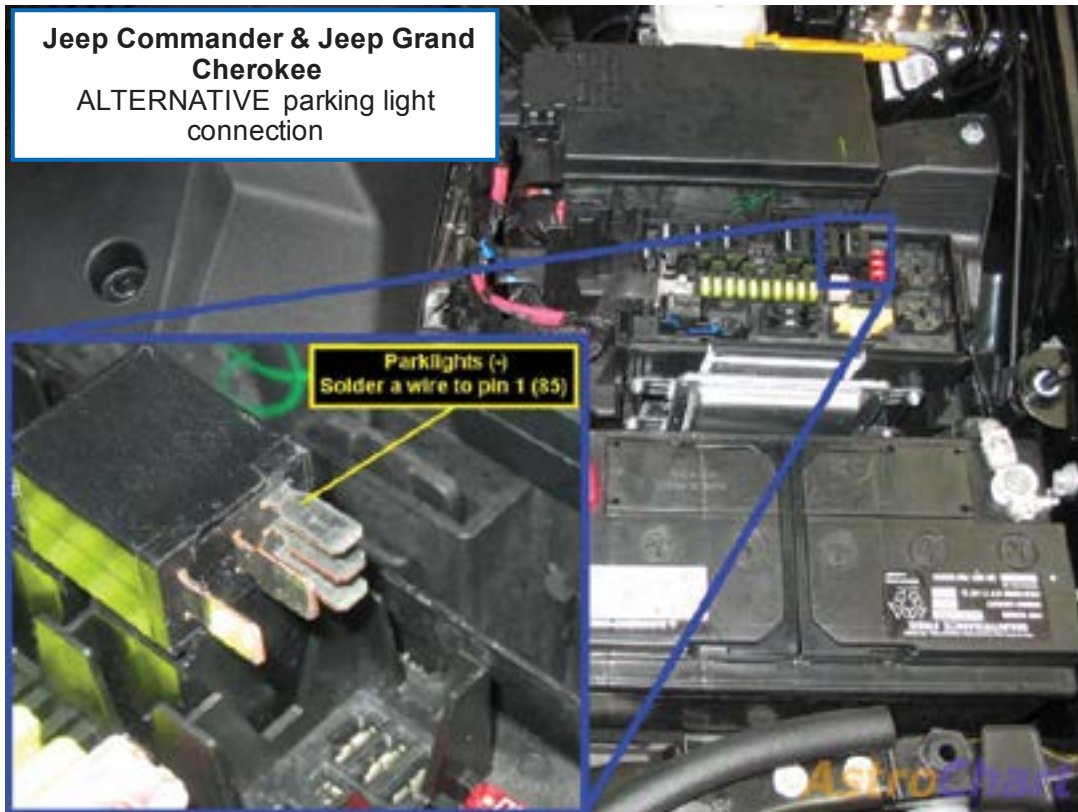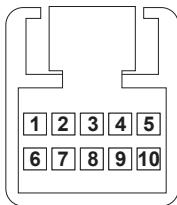




# Vehicle wiring reference charts (continued)


## Installation Type 3

Vehicle	Years	Vehicle Parking Light Wire	Polarity	Location
<b>Chrysler</b>				
200	2011-14	White/Violet	(+)	Driver kick panel
Aspen	2007-09	Pink/Red	(+)	Driver kick fuse box, black 40-pin plug
Sebring	2007-10	White/Violet	(+)	Driver kick panel
Sebring Convertible	2008-10	White/Violet	(+)	Driver kick panel
Sebring Sedan	2007-10	White/Violet	(+)	Driver kick panel
<b>Dodge</b>				
Avenger	2008+	White/Violet	(+)	Driver kick panel
Caliber	2007-12	White/Violet	(+)	Driver kick panel
Dakota	2007-11	Pink/Red	(+)	Underhood fuse box, black 20-pin plug, pin 15
Durango	2007-09	Pink/Red	(+)	Driver kick fuse box, black 40-pin plug, pin 6
Nitro	2007-11	White/Violet	(+)	Driver kick panel
RAM	2006-08	White/Yellow (L), White/Gray	(+)	Totally Integrated Power Module under hood, connector C9, pins 8,10
		<b>OR</b>		
		White.Lt.Green	MUX	Headlight switch. Use a resistor and relay, see Tech Tip 1082 Multiplex Light Circuit Intergration.
<b>Jeep</b>				
Compass	2007+	White/Violet	(+)	Driver kick panel
Liberty	2008-12	White/Violet	(+)	Driver kick panel
Patriot	2007+	White/Violet	(+)	Driver kick panel
Wrangler	2007+	White/Violet	(+)	Passenger kick panel
Wrangler Limited	2007+	White/Violet	(+)	Passenger kick panel
<b>Mitsubishi</b>				
Raider	2007-09	Pink/Red	(+)	Underhood fuse box, black 20-pin plug, pin 15


Driver kick fuse box, black 40-pin plug

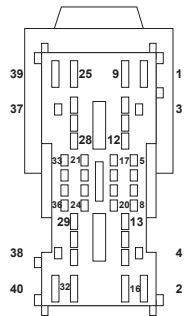


Underhood fuse box, black 20-pin plug

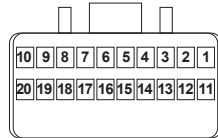

Above driver kick, gray 74-pin plug

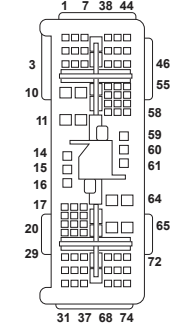

Module-Totally Integrated Power C9

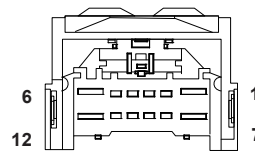


# Vehicle wiring reference charts (continued)

## Installation Type 4

Vehicle	Years	Vehicle Parking Light Wire	Polarity	Location
<b>Chrysler</b>				
300/300c	2005-07	White/Violet	(+)	Passenger kick panel
PT Cruiser	2006-10	White/Violet	(+)	Driver kick panel
<b>Dodge</b>				
Caliber	2007	White/Violet	(+)	Driver kick panel
Charger	2006-07	White/Violet	(+)	Passenger kick panel
Magnum	2005-07	White/Violet	(+)	Passenger kick panel
RAM	2006	White/Gray	(+)	Above driver kick, gray 74-pin plug
<b>Jeep</b>				
Commander	2006-07	White/Dk. Blue	(-)	Hazard light switch
Grand Cherokee	2005-07	White/Dk. Blue	(-)	Hazard light switch

Above driver kick, gray 74-pin plug

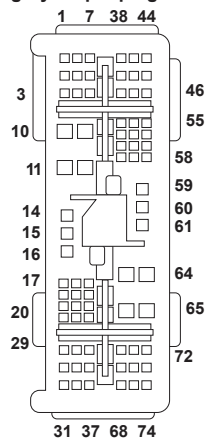

# Vehicle wiring reference charts (continued)

## Installation Type 5

### Parking Lights


Vehicle	Years	Vehicle Parking Light Wire	Polarity	Location
<b>Dodge</b>				
Dakota	2005-06	Pink/Red	(+)	Underhood fuse box, black 20-pin plug, pin 15
Durango	2004-06	Pink/Red	(+)	Driver kick fuse box, black 40-pin plug, pin 6
<b>Mitsubishi</b>				
Raider	2006	Pink/Red	(+)	Underhood fuse box, black 20-pin plug, pin 15

### Ignition Switch, black 14-pin plug


\* Vehicle may not have an Accessory 2 wire in pin 1 or 8. If that is the case, this connection is unnecessary.

Vehicle	Years	12 V	Starter	Ignition	Ignition 2	Accessory	Accessory 2*
<b>Dodge</b>							
Dakota	2005	Red, pin 7	Pink/Lt. Blue, pin 13	Pink/Lt. Green, pin 3	Pink, pin 2	Pink/White, pin 14	Dk. Blue (+), pin 8
Dakota	2006	Red, pin 7	Pink/Lt. Blue, pin 13	Pink/Lt. Green, pin 3	Pink, pin 2	Pink/White, pin 14	Violet (-), pin 1
Durango	2004	Red/Dk. Blue, pin 7	Pink/Lt. Blue, pin 13	Pink/Lt. Green, pin 3	Pink, pin 2	Pink/Yellow, pin 14	Dk. Blue (+), pin 8
Durango	2005-06	Red/Dk. Blue, pin 7	Pink/Lt. Blue, pin 13	Pink/Lt. Green, pin 3	Pink, pin 2	Pink/Yellow, pin 14	Violet (-), pin 1
<b>Mitsubishi</b>							
Raider	2006	Red, pin 7	Pink/Lt. Blue, pin 13	Pink/Lt. Green, pin 3	Pink, pin 2	Pink/White, pin 14	Violet (-), pin 1


Underhood fuse box, black 20-pin plug

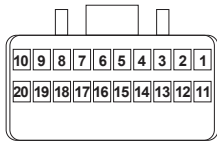

Driver kick fuse box, black 40-pin plug

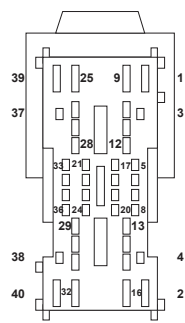

Ignition switch, black 14-pin plug



## Connecting the module

### Important!

Before connecting the Directed Digital System, it is important to ensure that the proper feature and function programming is selected using the configuration wizard. Visit [www.directechs.com](http://www.directechs.com) to use the latest version of the online tool.

To make this selection:

1. Disconnect the main module from any (+) 12V power source, then connect it to your computer using the **XKLoader**.
2. Open the Internet Explorer browser (version 6.0 and later) and go to **www.directechs.com**; the programming window will be displayed automatically.
3. Follow the instructions in the pop up window that will be displayed when the module is detected.  
**Note:** If the latest firmware is already loaded, only the feature options will be flashed. Check the **Yes** box if you wish to flash the firmware as well.

Once the module is programmed, you can proceed with the instructions below.

### Manual or automatic transmission selection

The yellow loop on the Directed Digital System controls which transmission type the unit is configured for. The state of the loop (uncut or cut) when the main module is powered up will determine which type is selected.

- Uncut (default): Manual transmission.
- Cut: Automatic transmission.

For safety reasons, all Directed Digital Systems are shipped ready to use with a manual transmission (the yellow loop is untouched). If the loop is cut after power has been applied, it is necessary to cycle power to the main module (via the white 12-pin main power harness) so the unit will see the state change on the loop and appropriately configure the transmission type.

### Ready mode

To successfully remote start a vehicle equipped with a manual transmission, the Ready Mode feature must be enabled before exiting the vehicle. Please refer to the Owner's Guide for more details on this required process.

### *Additional connections required for vehicles equipped with a manual transmission (if not supported by firmware)*

Connection	Description
(-) Emergency Brake Input (black/white, pin 2)	Must be connected to a working emergency brake in the vehicle. Although most vehicles have simple (-) trigger emergency brake circuits note some vehicles do not and may require unique integration methodologies.
(-) Door Input (white/green, pin 10) OR (+) Door Input (yellow/green, pin 11)	Must be connected to a working door trigger in the vehicle, which monitors all doors. The unit must monitor the door pins to allow the Ready Mode process to be enabled. <b>Note:</b> Some vehicles may require unique integration methodologies for this circuit.
(AC) Tachometer Input (violet/white, pin 6)	Must be connected to a working tachometer signal in the vehicle (fuel injector, ignition coil, true tach, etc.) and learned successfully to the Directed Digital System.

**Note:** Refer to [www.directechs.com](http://www.directechs.com) for more information.

## Optional sensors

**Note:** The sensor port is only active on hybrid systems.

The 4-pin sensor port is compatible with a number of different Directed sensors including, but not limited to:

- Shock Sensor – 504D
- Field Disturbance Sensor – 508D
- Ultrasonic Sensor – 509U

**Note:** In the case of 508D, power and ground must be hardwired to the vehicle – power and ground should **NOT** be obtained from the 4-pin sensor port.

Each sensor will have its own instructions, which must be followed for installation and adjustment.

## RF kits

An RF kit consists of one or multiple remotes, a Control Center (antenna), and an antenna cable – various combinations exist. An RF kit allows the vehicle owner to control the system with enhanced range. Two-way models are available. Please follow the instructions included with the kit for appropriate installation and programming information.

When flashing the Directed Digital System, make sure to pick the remote you will be using. This way the main module will have the necessary firmware to interact with the remote and Control Center (antenna) combination.

## When used in conjunction with SmartStart

The Directed Digital System main module must be disconnected from any power source before SmartStart can be connected to it. Failing to do so could damage main module.

To ensure that the D2D communication between the Directed Digital System and SmartStart works properly, one of the following actions must be executed, depending on the hardware you are using:

- Rev **A** SmartStart – The brown or blue loop must be cut.
- Rev **B** SmartStart – The gray wire must be connected to a ground source.



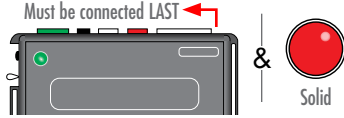
Do **NOT** connect the SmartStart 2-pin power harness. Power and ground will be provided by the D2D connector on main module.

## Module programming

 Refer to "LED diagnostics and troubleshooting" on page 24 for more information and for troubleshooting purposes.

### With Factory Keyless

To connect the module:

- 1 Please ensure that the vehicle is in a safe location and cannot move forward during programming. For vehicles equipped with a manual transmission, make sure the gearshift lever is in the neutral position. 
- 2 Connect all the harnesses to the Directed Digital System, **EXCEPT** the white 12-pin main power harness. 
- 3 Connect the white 12-pin main power harness, and wait until the LED turns ON solid red. 

#### Key Ignition

Insert the key into the ignition barrel and turn it to the ON position. It is important to wait for the LED to start flashing green. Refer to LED Diagnostics section for troubleshooting if the LED does not flash green within 15 seconds.




- 4 **OR** **OR**

#### Push-to-Start (PTS) Ignition


**Important:** Do NOT press the brake pedal.

Press the Push-to-Start (PTS) button twice to turn the ignition ON. It is important to wait for the LED to start flashing green. Refer to the LED Diagnostics section for troubleshooting if the LED does not flash green within 15 seconds.

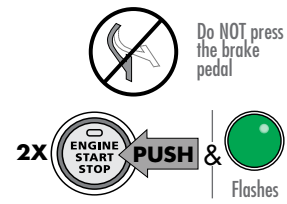

#### Key Ignition

Turn the key to the OFF position and remove it from the ignition barrel.




- 5 **OR** **OR**

#### Push-to-Start (PTS) Ignition

Press the Push-to-Start (PTS) button once more to turn the ignition OFF.

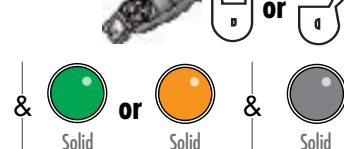

- 6 Press LOCK or UNLOCK on the **factory transmitter**. The LED turns ON solid green OR orange for 3 seconds and then turns off. 





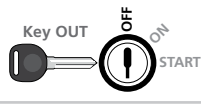
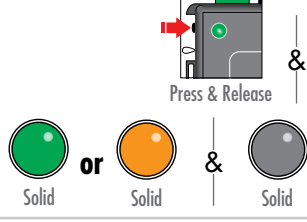
- 7 Pair remotes (if applicable). For information on how to pair a specific remote, please refer to its corresponding owner documentation, which can be found inside the product packaging of the complete system or on [www.directechs.com](http://www.directechs.com).\*
- 8 By default, the tachometer is preprogrammed for the vehicle. For instructions on how to program tach, refer to the Analog Installation Guide, which can be found on [www.directechs.com](http://www.directechs.com).



\* Your aftermarket remote may differ from the model shown in the illustrations.

### Without Factory Keyless

To connect the module:

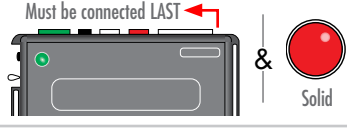- 1 Please ensure that the vehicle is in a safe location and cannot move forward during programming. For vehicles equipped with a manual transmission, make sure the gearshift lever is in the neutral position. 
- 2 Connect all the harnesses to the Directed Digital System, **EXCEPT** the white 12-pin main power harness. 
- 3 Connect the white 12-pin main power harness, and wait until the LED turns ON solid red. 
- 4 Insert the key into the ignition barrel and turn it to the ON position. It is important to wait for the LED to start flashing green. Refer to LED Diagnostics section for troubleshooting if the LED does not flash green within 15 seconds. 
- 5 Turn the key to the OFF position and remove it from the ignition barrel. 
- 6 Press and release the programming button. The LED turns ON solid green **OR** orange for 3 seconds and then turns OFF. 
- 7 Pair remotes (if applicable). For information on how to pair a specific remote, please refer to its corresponding owner documentation, which can be found inside the product packaging of the complete system or on [www.directechs.com](http://www.directechs.com).\*
- 8 By default, the tachometer is preprogrammed for the vehicle. For instructions on how to program tach, refer to the Analog Installation Guide, which can be found on [www.directechs.com](http://www.directechs.com).








\* Your aftermarket remote may differ from the model shown in the illustrations.

## LED diagnostics and troubleshooting


This section provides LED diagnostics and troubleshooting information to guide you through the various stages of your installation.

 For more details on "Remote start shutdown/startup diagnostics", refer to the Analog Installation guide, which can be found on [www.directechs.com](http://www.directechs.com).




### Module programming

LED	Description	Troubleshooting	Comment
 Solid	The bus type cannot be detected.	Make sure that the connections to the data bus are correct and insert the key in the ignition switch.	
 Flashes	The vehicle type cannot be detected.	Insert the key in the ignition switch and turn to the ON position. You may need to wait up to 10 seconds.	
 Flashes	Waiting for keyless.	Remove the key from the ignition switch and press a keyless button.	
 Solid x3 Secs	Module programming was completed successfully.	Normal operation.	
 Solid x3 Secs	Module was successfully programmed without SmartStart DTC code alert.	Normal operation.	

### External module synchronization






LED	Description	Troubleshooting	Comment
 (Flashes red, red, then orange) x 10	OBDII feature not supported.	Diagnostic data bus not detected.	Some features are not supported by SmartStart. Check the Tan - Tan/Black and/or Orange/Green - Orange/Brown wire for proper connections. Refer to the wiring installation section to check the connections.

### Active ground when running (status)

LED	Description	Troubleshooting	Comment
 Flashes green	GWR (Status) command received.	Used to ensure the module has received the remote start message and has enabled the remote start runtime.	Commands can come from RF, D2D or W2W.
 Flashes red & orange	IGNITION ON command received.	Used to ensure the module received the ignition command.	In a W2W install, it will show only if the ignition input wire is used.
 Flashes green quickly	START ON command received.	Used to ensure the module received the start command.	




## External commands

LED	Description	Troubleshooting	Comment
 Flashes orange x 1	LOCK command received.	If the bypass module fails to flash, it means the module did not receive the signal.	Commands can come from RF, D2D or W2W.
 Flashes orange x 2	UNLOCK command received.		
 Flashes orange x 3	TRUNK command received.		
 Flashes orange x 4	AUX1 command received.		
 Flashes orange x 5	AUX2 command received.		


## Module reset

A module reset will only erase the steps performed in "Module programming" on page 22. All settings (firmware) and settings flashed to the module using the web configuration tool will not be affected.

- 1 If required for your installation, connect both black 16-pin and white 18-pin harnesses, as well as the white 7-pin harness to the module. Press and hold the programming button, then connect the white 12-pin harness to the module.

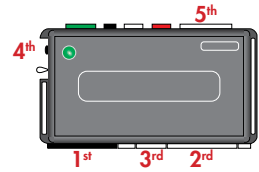

- 2 Wait 3 seconds until the LED turns ON solid orange then release the programming button. The LED turns ON solid red.

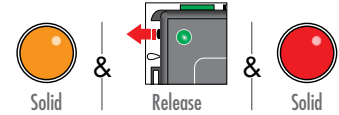


## Hard reset


### Warning Against Executing a Hard Reset!

A hard reset will revert the flashed firmware back to its default settings. Depending on the installation, some settings may need to be reconfigured. Connect your module to a computer and use the web configuration tool to edit its programmable features.

- 1 If required for your installation, connect both black 16-pin and white 18-pin harnesses, as well as the white 7-pin harness to the module. Press and hold the programming button, then connect the white 12-pin harness to the module.

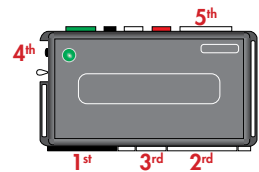

- 2 After 3 seconds the LED turns ON solid orange. Keep holding the programming button until the LED flashes red, then orange slowly.

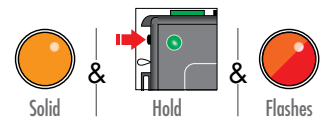

- 3 Release the programming button. The LED turns ON solid red.



## Learning the Tach (not needed with Virtual Tach)

---

Tach comes preprogrammed, therefore learning is not required; however, it can be readjusted with the following operations:

1. Start the vehicle using the key.
2. Within 5 seconds, press and hold the Control Center\* (antenna) or the main module programming button, until the LED on the Control Center (antenna) or the main module turns ON solid.
3. Release the button. Tachometer value is now stored in memory.  
If the LED does not turn ON solid, find an alternate tach source.

\* If the Control Center (antenna) was not included in your kit, the tach can be programmed using the programming button directly on the main module.

**Note:** When the tachometer is programmed, the main module automatically enters the Tachometer engine checking mode.

## Initializing Virtual Tach (not needed with hardwired or data tach applications)

---

To program Virtual Tach:

1. After the install is complete, remote start the engine. The programming operation may require 3 cranks of the starter before the engine starts and runs. Do not turn off the remote start if this happens, it is a normal programming operation.
2. Once the engine begins running, let it run for at least 30 seconds.
3. Using the Remote, send the Remote start command to turn remote start off. Virtual Tach is programmed. To reset Virtual Tach, a module reset must be done.

**Note:** Virtual Tach cannot be used in Manual Transmission Mode. It is also not recommended for diesel trucks.

Virtual Tach handles disengaging the starter motor during remote starting – it does not address over-rev. If the customer wants to have the over-rev protection capability, the tach wire or data tach must be used.

**Important!** After successfully learning Virtual Tach, a small minority of vehicle starters may over crank or under crank during remote start. Use the VirtualTach Fine tune feature in the configuration wizard to adjust the starter output time in 50mS increments to compensate for such an occurrence.

## Limited lifetime consumer warranty

---

Directed Electronics. ("Directed") promises to the original purchaser to repair or replace (at Directed's election) with a comparable reconditioned model any Directed unit (hereafter the "unit"), excluding without limitation the siren, the remote transmitters, the associated sensors and accessories, which proves to be defective in workmanship or material under reasonable use during the lifetime of the vehicle provided the following conditions are met: the unit was purchased from an authorized Directed dealer, the unit was professionally installed and serviced by an authorized Directed dealer; the unit will be professionally reinstalled in the vehicle in which it was originally installed by an authorized Directed dealer; and the unit is returned to Directed, shipping prepaid with a legible copy of the bill of sale or other dated proof of purchase bearing the following information: consumer's name, telephone number and address; the authorized dealers name, telephone number and address; complete product description, including accessories; the year, make and model of the vehicle; vehicle license number and vehicle identification number. All components other than the unit, including without limitation the siren, the remote transmitters and the associated sensors and accessories, carry a one-year warranty from the date of purchase of the same. ALL PRODUCTS RECEIVED BY DIRECTED FOR WARRANTY REPAIR WITHOUT PROOF OF PURCHASE FROM AN AUTHORIZED DEALER WILL BE DENIED. This warranty is non-transferable and is automatically void if: the unit's date code or serial number is defaced, missing or altered; the unit has been modified or used in a manner contrary to its intended purpose; the unit has been damaged by accident, unreasonable use, neglect, improper service, installation or other causes not arising out of defects in materials or construction. The warranty does not cover damage to the unit caused by installation or removal of the unit. Directed, in its sole discretion, will determine what constitutes excessive damage and may refuse the return of any unit with excessive damage.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE AND WARRANTY OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY, ARE EXPRESSLY EXCLUDED; AND DIRECTED NEITHER ASSUMES NOR AUTHORIZES ANY PERSON OR ENTITY TO ASSUME FOR IT ANY DUTY, OBLIGATION OR LIABILITY IN CONNECTION WITH ITS PRODUCTS. DIRECTED DISCLAIMS AND HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING ITS AUTHORIZED DEALERS OR INSTALLERS. DIRECTED SECURITY SYSTEMS, INCLUDING THIS UNIT, ARE DETERRENTS AGAINST POSSIBLE THEFT. DIRECTED IS NOT OFFERING A GUARANTEE OR INSURANCE AGAINST VANDALISM, DAMAGE OR THEFT OF THE AUTOMOBILE, ITS PARTS OR CONTENTS; AND HEREBY EXPRESSLY DISCLAIMS ANY LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, LIABILITY FOR THEFT, DAMAGE AND/OR VANDALISM. THIS WARRANTY DOES NOT COVER LABOR COSTS FOR MAINTENANCE, REMOVAL OR REINSTALLATION OF THE UNIT OR ANY CONSEQUENTIAL DAMAGES OF ANY KIND. IN THE EVENT OF A CLAIM OR A DISPUTE INVOLVING DIRECTED OR ITS SUBSIDIARY, THE VENUE SHALL BE SAN DIEGO COUNTY IN THE STATE OF CALIFORNIA. CALIFORNIA STATE LAWS AND APPLICABLE FEDERAL LAWS SHALL APPLY AND GOVERN THE DISPUTE. THE MAXIMUM RECOVERY UNDER ANY CLAIM AGAINST DIRECTED SHALL BE STRICTLY LIMITED TO THE AUTHORIZED DIRECTED DEALER'S PURCHASE PRICE OF THE UNIT. DIRECTED SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGE TO VEHICLE, DAMAGES FOR THE LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, THE MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE SUBJECT TO THE CONDITIONS AS DESCRIBED HEREIN. THIS WARRANTY IS VOID IF THE UNIT HAS NOT BEEN PURCHASED FROM DIRECTED, OR AN AUTHORIZED DIRECTED DEALER, OR IF THE UNIT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, ACTS OF GOD, NEGLIGENCE, IMPROPER SERVICE, OR OTHER CAUSES NOT ARISING OUT OF DEFECT IN MATERIALS OR CONSTRUCTION.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights that vary from State to State.

This warranty is only valid for sale of product(s) within the United States of America and in Canada. Product(s) sold outside of the United States of America or Canada are sold "AS-IS" and shall have NO WARRANTY, express or implied.

For further details relating to warranty information of Directed products, please visit the support section of Directed's website at: [www.directed.com](http://www.directed.com).


This product may be covered by a Guaranteed Protection Plan ("GPP"). See your authorized Directed dealer for details of the plan or call Directed Customer Service at 1-800-876-0800.

(920-10011-01 2011-06)


# Quick Reference Guide – Viper, Clifford, Python, Avital & Automate (Regular Key)


## Vehicle takeover with regular key


- 1 Close the vehicle doors, hood and trunk, then press the **Remote Start** button on the transmitter to start the vehicle.\*




Press Remote Start button\*
- 2 Press the **Unlock** button on the factory or aftermarket remote.\*



Press Unlock on either remote\*
-  Complete the following steps within 45 seconds or the vehicle will shut down.
- 3 Enter the vehicle and turn the key into ON position.

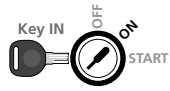

Key IN OFF ON START
- 4 Depress the brake pedal, put the car in gear and drive off.




Ready to drive off


\* Your aftermarket remote may differ from the model shown in the illustrations.

## Manual transmission ready mode


- 1 While the vehicle is running, put the gear in **Neutral (N)**.



Put gear in Neutral
- 2 Depress the vehicle's foot brake.




Depress brake pedal Brakes
- 3 Apply the emergency brake.




Apply emergency brake

Release the vehicle's foot brake.
- 4 **Warning!** Depressing the brake pedal again after this step will disable the remote start feature.




Apply emergency brake x1 OR 2 & Release brake pedal


Press any button on the transmitter.\* The parking lights flash 5 times confirming that the remote start feature is active.
- 5 **Note:** If the parking lights do not flash 5 times, you have not entered manual transmission mode and will need to repeat steps 1 to 5.

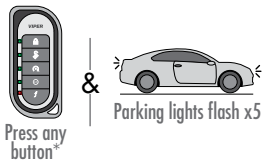

Press any button\* & Parking lights flash x5
- 6 Turn ignition OFF and remove the key from the ignition barrel.

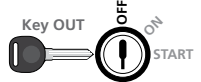


Key OUT OFF ON START
- 7 Exit the vehicle.

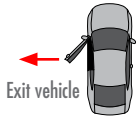

Exit vehicle

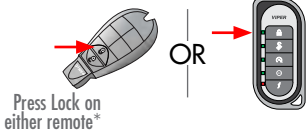


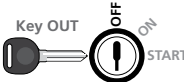

Press the **Lock** button on the factory or aftermarket remote.\*
- 8 The vehicle engine will shut Off after locking the system.



Press Lock on either remote\*

\* Your aftermarket remote may differ from the model shown in the illustrations.





## Pit stop mode

- 1 Stop the vehicle in a safe parking spot and put the gear in **Park (P)**. On manual transmission vehicle, open the driver door.
 
- 2 Press the **Remote Start** button on the transmitter. \*
 
 &
 
  
The parking lights will flash once to indicate the vehicle is now in **Pit Stop Mode**.
- 3 Turn ignition OFF and remove the key from the ignition barrel.
 
- 4 It is safe to leave the engine running and exit the vehicle with the key in hand.
 
  
**Note:** We recommend that you always lock the doors of your vehicle when leaving it unattended.

\* Your aftermarket remote may differ from the model shown in the illustrations.

## List of available commands

Note that the information below is for Viper, Clifford and Python models. Icons and commands may differ depending on the remote brand and model purchased. Refer to your authorized installation center for more information.

Button(s)	Actions
	Press & hold for 1 second to lock.
	Press & hold for 1 second to unlock.
	Press & hold for 1 second to remote start.
	Press & hold for 5 seconds to activate the trunk release (optional).

\* This output is configurable. see your authorized installation center for more information.

## SmartStart compatible



This system is compatible with Directed SmartStart 3.0. For a complete list of supported features, please visit [www.mysmartstart.com](http://www.mysmartstart.com).

### What is SmartStart?

Now you can remote start, lock and unlock your car just by pushing a button on your smartphone; using the SmartStart App from Directed, the leader in vehicle security and remote start. The simple graphical interface gives you control over the following features of your installed remote start or security with remote start system:

- Lock/Arm
- Unlock/Disarm
- Remote Car Starter
- Trunk Release
- Panic
- Aux Channels


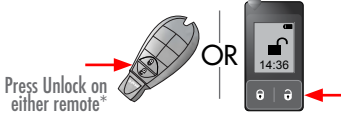

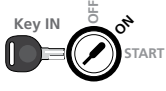

You can also control multiple vehicles – great for families – and assign more than one user to control a vehicle. It's easy with SmartStart! But, this is only the beginning! SmartStart is loaded with additional features including GPS tracking, SmartSchedule, vehicle status, roadside assistance, home control, parked car finder and more.

3.0 enables a "Cloud-Connected Car" like never before, providing an entirely new level of 2-way interaction with your vehicle. Connectivity is managed through the Directed Cloud Services (DCS) network linking car, app, end user, and the Internet.

For more information, visit [www.mysmartstart.com](http://www.mysmartstart.com).






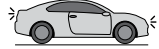
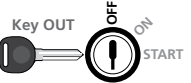
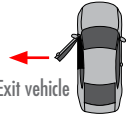
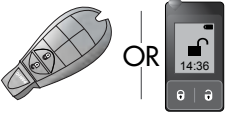

# Quick Reference Guide – Autostart (Regular Key)

## Vehicle takeover

- 1 Close the vehicle doors, hood and trunk, then press the **Remote Start** button on the transmitter to start the vehicle.\*  

- 2 Press the **Unlock** button on the factory or aftermarket remote.\*  

-  Complete the following steps within 45 seconds or the vehicle will shut down.
- 3 Enter the vehicle and turn the key into ON position.  

- 4 Depress the brake pedal, put the car in gear and drive off.  







\* Your aftermarket remote may differ from the model shown in the illustrations.

## Manual transmission ready/idle mode sequence

- 1 While the vehicle is running, put the gear in **Neutral (N)**.  

- 2 Depress the vehicle's foot brake.  

- Apply the emergency brake twice (2), then release the vehicle's foot brake and skip to step 5.  
**OR**  
3 Apply the emergency brake, then release the vehicle's foot brake.  
 & 
- Warning!** Depressing the brake pedal again after this step will disable the remote start feature.
- 4 Within 10 seconds, press any button on the transmitter.\*  

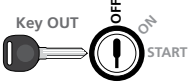- The parking lights flash 5 times confirming that the remote start feature is active.  
  
Parking lights flash x5
- 5 **Note:** If the parking lights do not flash 5 times, you have not entered manual transmission sequence and will need to repeat steps 1 to 5.
- 6 Turn ignition OFF and remove the key from the ignition barrel.  

- 7 Exit the vehicle.  

- 8 Press the:
  - **Lock** button on the factory or aftermarket remote\* to shut the vehicle Off and lock the doors.
  - **Trunk** button on the aftermarket remote only to lock the doors and enter idle mode.  


\* Your aftermarket remote may differ from the model shown in the illustrations.





## Idle mode (automatic transmission only)

- 1 Stop the vehicle in a safe parking spot and put the gear in **Park (P)**. 
  - 2 Press the **Remote Start** button on the transmitter. \*  &  Parking lights flash x1  
Press Remote Start button\*
  - 3 Turn ignition OFF and remove the key from the ignition barrel. 
  - 4 It is safe to leave the engine running and exit the vehicle with the key in hand.  Exit vehicle with remote
- Note:** We recommend that you always lock the doors of your vehicle when leaving it unattended.

\* Your aftermarket remote may differ from the model shown in the illustrations.

### List of available commands

Note that the information below is for Viper, Clifford and Python models. Icons and commands may differ depending on the remote brand and model purchased. Refer to your authorized installation center for more information.

Button(s)	Actions
	Press & hold for 1 second to lock.
	Press & hold for 1 second to unlock.
	Press & hold for 1 second to remote start.
	Press & hold for 5 seconds to activate the trunk release (optional).

\* This output is configurable. see your authorized installation center for more information.

### SmartStart compatible



This system is compatible with Directed SmartStart 3.0. For a complete list of supported features, please visit [www.mysmartstart.com](http://www.mysmartstart.com).

### What is SmartStart?

Now you can remote start, lock and unlock your car just by pushing a button on your smartphone; using the SmartStart App from Directed, the leader in vehicle security and remote start. The simple graphical interface gives you control over the following features of your installed remote start or security with remote start system:

- Lock/Arm
- Unlock/Disarm
- Remote Car Starter
- Trunk Release
- Panic
- Aux Channels

You can also control multiple vehicles – great for families – and assign more than one user to control a vehicle. It's easy with SmartStart! But, this is only the beginning! SmartStart is loaded with additional features including GPS tracking, SmartSchedule, vehicle status, roadside assistance, home control, parked car finder and more.


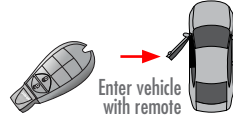


3.0 enables a "Cloud-Connected Car" like never before, providing an entirely new level of 2-way interaction with your vehicle. Connectivity is managed through the Directed Cloud Services (DCS) network linking car, app, end user, and the Internet.

For more information, visit [www.mysmartstart.com](http://www.mysmartstart.com).






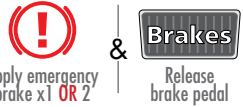
# Quick Reference Guide – Viper, Clifford, Python, Avital & Automate (Smart Key)

## Vehicle takeover


- 1 Close the vehicle doors, hood and trunk, then press the **Remote Start** button on the transmitter to start the vehicle.\*  

  - 2 Enter the vehicle, while making sure the factory remote is inside with you.  

- Important: Do NOT press the brake pedal.**
- 3 Press the PTS button twice to turn the ignition ON.  

  - 4 Depress the brake pedal, put the car in gear and drive off.  





\* Your aftermarket remote may differ from the model shown in the illustrations.

## Manual transmission ready mode


- 1 While the vehicle is running, put the gear in **Neutral (N)**.  

- 2 Depress the vehicle's foot brake.  

- 3 Apply the emergency brake.  

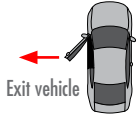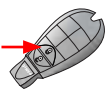- 4 Release the vehicle's foot brake.  


**Warning!** Depressing the brake pedal again after this step will disable the remote start feature.



**Brakes**  
Release brake pedal
- 5 Press any button on the transmitter.\* The parking lights flash 5 times confirming that the remote start feature is active.  

- 6 Exit the vehicle.  

- 7 Press the **Lock** button on the factory or aftermarket remote.\*  


OR








Press Lock on either remote\*

The vehicle engine will shut Off after locking the system.

\* Your aftermarket remote may differ from the model shown in the illustrations.





## Pit stop mode

- 1 Stop the vehicle in a safe parking spot and put the gear in **Park (P)**. 
- 2 Press the **Remote Start** button on the transmitter. \*  &  Parking lights flash x1  
Press Remote Start button\*
- 3 Press the PTS button once. 
- 4 It is safe to leave the engine running and exit the vehicle with the factory remote in hand.  Exit vehicle with remote  
**Note:** We recommend that you always lock the doors of your vehicle when leaving it unattended.

\* Your aftermarket remote may differ from the model shown in the illustrations.

## List of available commands

Note that the information below is for Viper, Clifford and Python models. Icons and commands may differ depending on the remote brand and model purchased. Refer to your authorized installation center for more information.

Button(s)	Actions
	Press & hold for 1 second to lock.
	Press & hold for 1 second to unlock.
	Press & hold for 1 second to remote start.
	Press & hold for 5 seconds to activate the trunk release (optional).

## SmartStart compatible



This system is compatible with Directed SmartStart 3.0. For a complete list of supported features, please visit [www.mysmartstart.com](http://www.mysmartstart.com).

### What is SmartStart?

Now you can remote start, lock and unlock your car just by pushing a button on your smartphone; using the SmartStart App from Directed, the leader in vehicle security and remote start. The simple graphical interface gives you control over the following features of your installed remote start or security with remote start system:

- Lock/Arm
- Unlock/Disarm
- Remote Car Starter
- Trunk Release
- Panic
- Aux Channels





You can also control multiple vehicles – great for families – and assign more than one user to control a vehicle. It's easy with SmartStart! But, this is only the beginning! SmartStart is loaded with additional features including GPS tracking, SmartSchedule, vehicle status, roadside assistance, home control, parked car finder and more.

3.0 enables a "Cloud-Connected Car" like never before, providing an entirely new level of 2-way interaction with your vehicle. Connectivity is managed through the Directed Cloud Services (DCS) network linking car, app, end user, and the Internet.

For more information, visit [www.mysmartstart.com](http://www.mysmartstart.com).








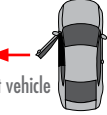
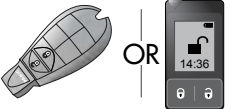

# Quick Reference Guide – Autostart (Smart Key)

## Vehicle takeover

- 1 Close the vehicle doors, hood and trunk, then press the **Remote Start** button on the transmitter to start the vehicle.\*  

- 2 Enter the vehicle, while making sure the factory remote is inside with you.  

- Important: Do NOT press the brake pedal.**
- 3 Press the PTS button twice to turn the ignition ON.  

- 4 Depress the brake pedal, put the car in gear and drive off.  


\* Your aftermarket remote may differ from the model shown in the illustrations.

## Manual transmission ready/idle mode sequence

- 1 While the vehicle is running, put the gear in **Neutral (N)**.  

- 2 Depress the vehicle's foot brake.  

- Apply the emergency brake twice (2), then release the vehicle's foot brake and skip to step 5.  
**OR**  
3 Apply the emergency brake, then release the vehicle's foot brake.  
  
  
&  

- Warning!** Depressing the brake pedal again after this step will disable the remote start feature.
- 4 Within 10 seconds, press any button on the transmitter.\*  
  
  
The parking lights flash 5 times confirming that the remote start feature is active.  
**5 Note:** If the parking lights do not flash 5 times, you have not entered manual transmission sequence and will need to repeat steps 1 to 5.
- 6 Exit the vehicle.  

- Press the:
  - **Lock** button on the factory or aftermarket remote\* to shut the vehicle Off and lock the doors.
  - **Trunk** button on the aftermarket remote only to lock the doors and enter idle mode.  
  
Press Lock to shut vehicle Off or Trunk (aftermarket remote only) to enter idle mode


\* Your aftermarket remote may differ from the model shown in the illustrations.

## Idle mode (automatic transmission only)

**1** Stop the vehicle in a safe parking spot and put the gear in **Park (P)**.



**2** Press the **Remote Start** button on the transmitter. \*  
The parking lights will flash once to indicate the vehicle is now in **Idle Mode**.

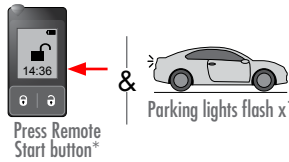

**3** It is safe to leave the engine running and exit the vehicle with the factory remote in hand.

**Note:** We recommend that you always lock the doors of your vehicle when leaving it unattended.



\* Your aftermarket remote may differ from the model shown in the illustrations.

## List of available commands

Note that the information below is for Viper, Clifford and Python models. Icons and commands may differ depending on the remote brand and model purchased. Refer to your authorized installation center for more information.

Button(s)	Actions
	Press & hold for 1 second to lock.
	Press & hold for 1 second to unlock.
	Press & hold for 1 second to remote start.
	Press & hold for 5 seconds to activate the trunk release (optional).

## SmartStart compatible



This system is compatible with Directed SmartStart 3.0. For a complete list of supported features, please visit [www.mysmartstart.com](http://www.mysmartstart.com).

### What is SmartStart?

Now you can remote start, lock and unlock your car just by pushing a button on your smartphone; using the SmartStart App from Directed, the leader in vehicle security and remote start. The simple graphical interface gives you control over the following features of your installed remote start or security with remote start system:

- Lock/Arm
- Unlock/Disarm
- Remote Car Starter
- Trunk Release
- Panic
- Aux Channels

You can also control multiple vehicles – great for families – and assign more than one user to control a vehicle. It's easy with SmartStart! But, this is only the beginning! SmartStart is loaded with additional features including GPS tracking, SmartSchedule, vehicle status, roadside assistance, home control, parked car finder and more.

3.0 enables a "Cloud-Connected Car" like never before, providing an entirely new level of 2-way interaction with your vehicle. Connectivity is managed through the Directed Cloud Services (DCS) network linking car, app, end user, and the Internet.

For more information, visit [www.mysmartstart.com](http://www.mysmartstart.com).